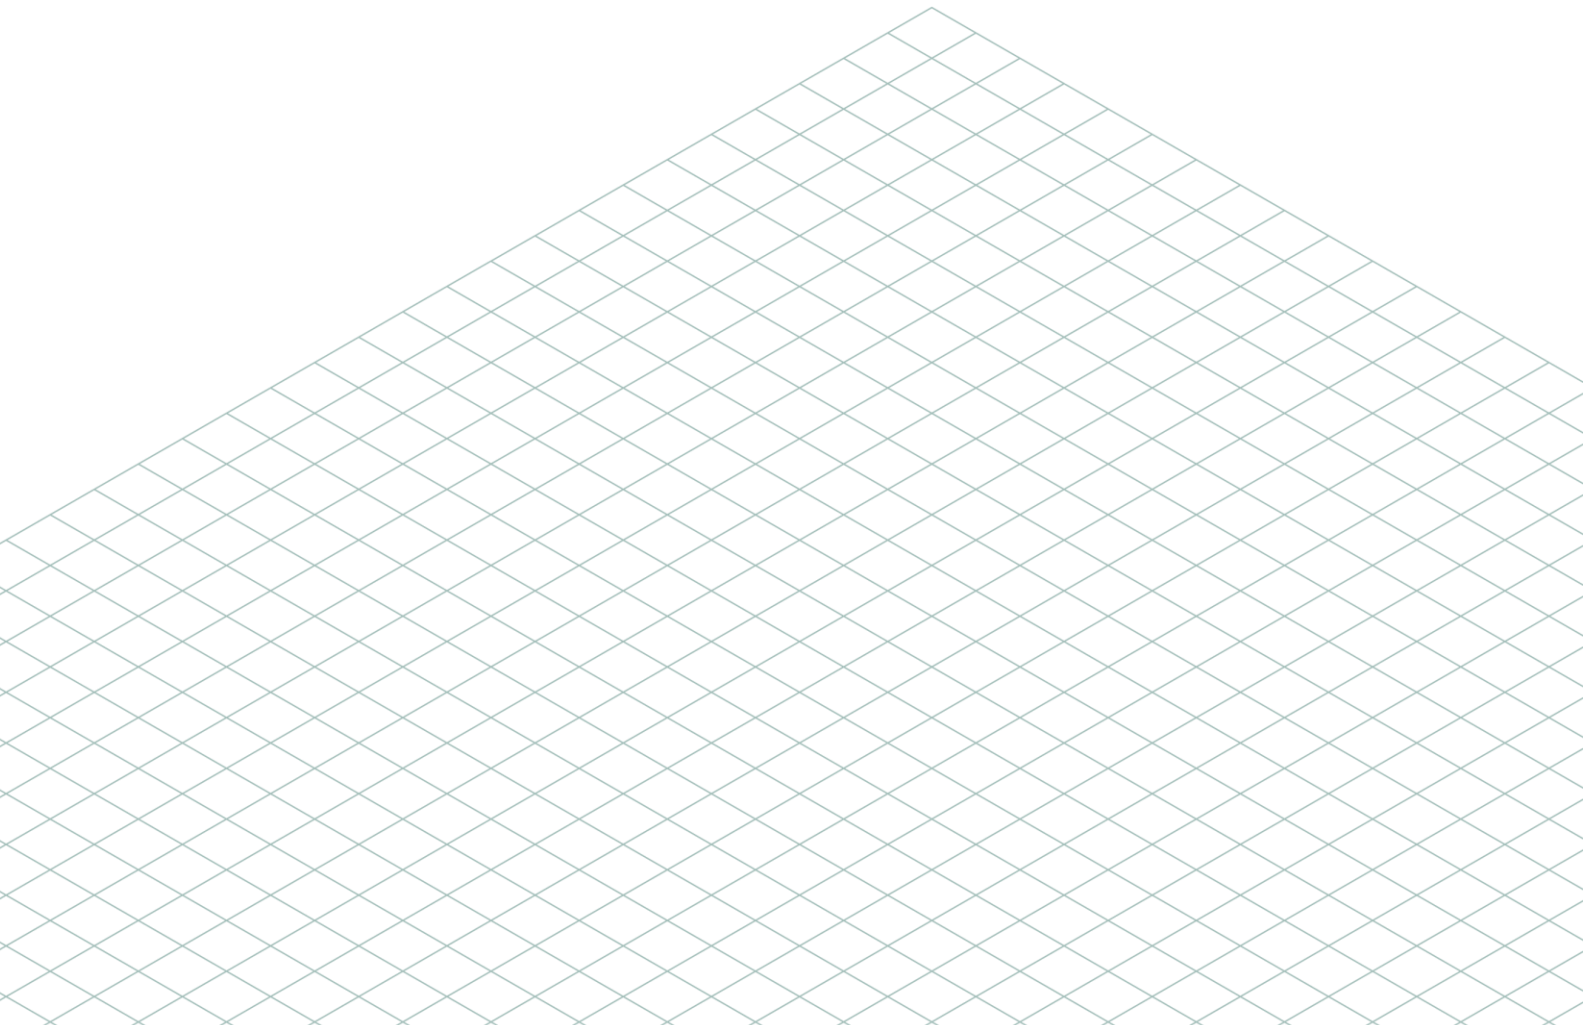 




# Steelwise Licensing Handbook



## Table of Contents

<b>1</b>	<b>Introduction .....</b>	<b>2</b>
1.1	Access.....	2
1.2	Navigation .....	4
1.3	List Views .....	5
1.4	Dashboard .....	6
<b>2</b>	<b>Users .....</b>	<b>7</b>
2.1	View Users.....	7
<b>3</b>	<b>User Groups.....</b>	<b>9</b>
3.1	View User Groups.....	9
3.2	Create a User Group.....	11
3.3	Edit a User Group .....	13
3.4	Delete a User Group.....	15
<b>4</b>	<b>License Entitlements .....</b>	<b>17</b>
<b>4.1</b>	<b>Manage Access to Licenses .....</b>	<b>17</b>
4.1.1	View which Groups can Access a License .....	17
4.1.2	Assign Users to Groups .....	19
<b>4.2</b>	<b>Manage Licenses.....</b>	<b>26</b>
4.2.1	View Licenses .....	26
4.2.2	Reserve License Seats.....	28
<b>4.3</b>	<b>View License Usage.....</b>	<b>32</b>
4.3.1	View Usage of a License .....	32
4.3.2	View Current License Usage for a User .....	33

# 1 Introduction

FRAMECAD Steelwise offers advanced license management tools for customers with multiple user types who need access to different configurations of FRAMECAD software.

If you purchase the same quantity of each Steelwise module (e.g. two seats each of Steelwise with Engineering), then all your users will simply have access to the same configuration when they open Steelwise. You need not do anything further with license administration.

If you instead purchase different configurations of Steelwise (e.g. configuration A with Steelwise and configuration B with Steelwise + Engineer) then you will have multiple entitlements and you will establish license user groups to manage which users have access to each entitlement.

Use the FRAMECAD Communities License Administrator tool to manage your purchased software entitlements and assign them to your users.

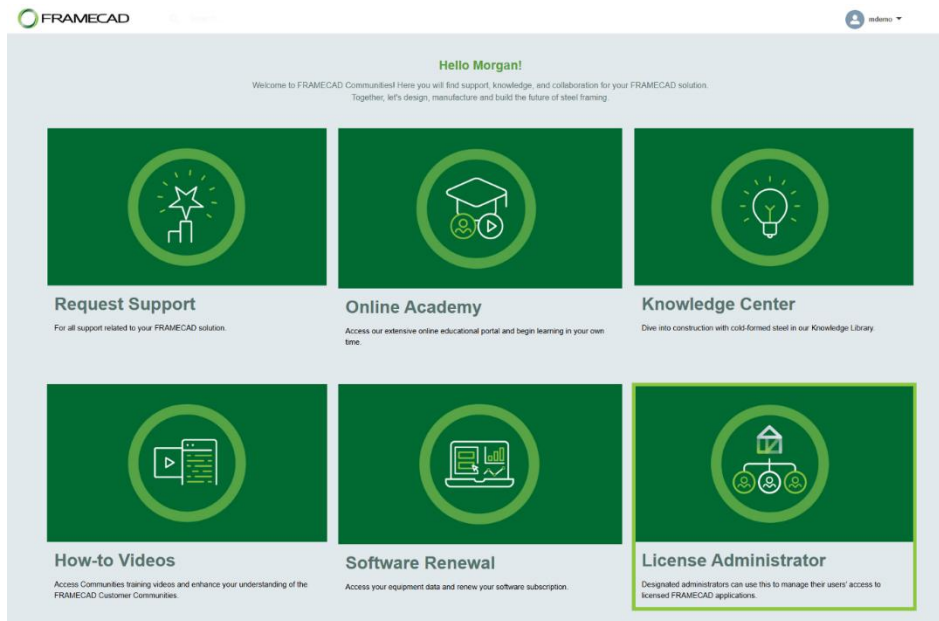 
You can, for example:

- Create and manage user groups for controlling access to licenses.
- Manage user access to licenses.
- Reserve seats from licenses for users.
- View the usage of licenses.


## 1.1 Access

To access Communities License Administrator, you need a user account and administrator access rights to your company's data.

For access, follow the URL provided by FRAMECAD or sign in to FRAMECAD Communities (<https://communities.framecad.com>) and select the **License Administrator** tile.



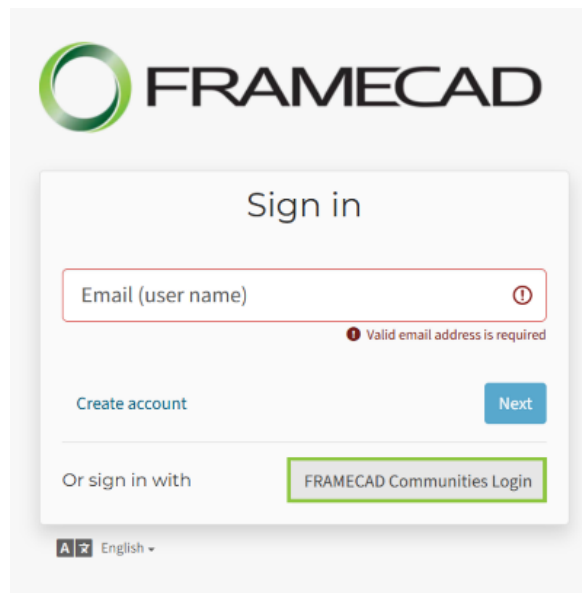 From here, you will be directed to another sign-in screen. Select **FRAMECAD Communities Login**, and the license administrator will automatically sign you in using your credentials from Communities.




If you or one of your organization's Steelwise users does not have access to License Administrator, please select "Request Support" to log a support ticket with the FRAMECAD team.


## 1.2 Navigation

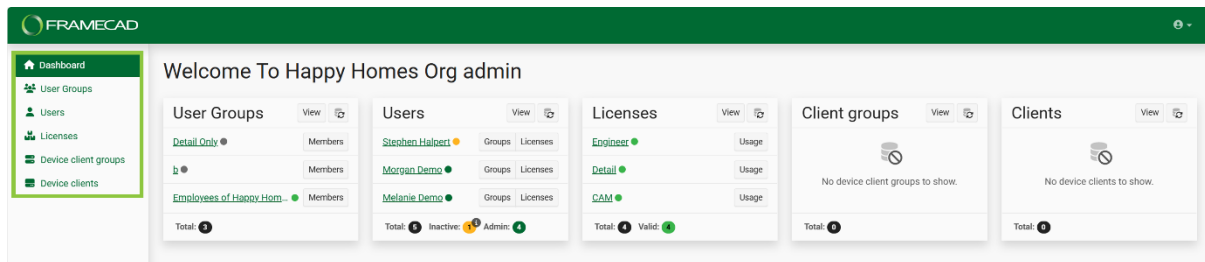 When you log in, you first come to the Dashboard. Use the sidebar navigation on the left to navigate the different features of License Administrator. Including:


- User Groups
- Users
- Licenses



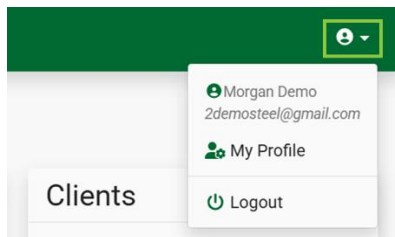 In the top toolbar on the right, you can access your profile settings and log out.



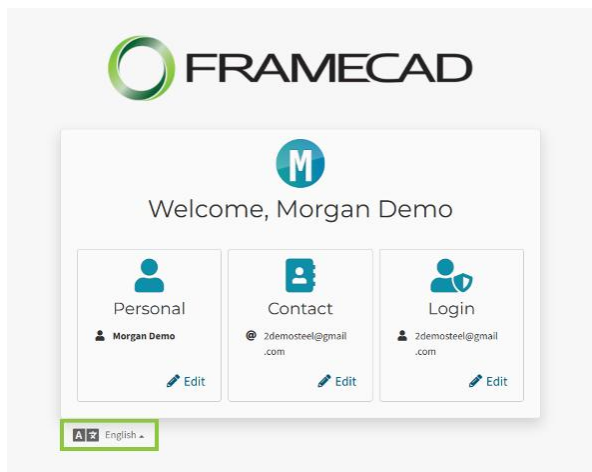 Select 'My Profile' to view your profile details or change the language preference of License Administrator.




*Note: You cannot edit any personal, contact, or login details here, as these details all come from your Communities account. Return to the Communities homepage to manage your profile settings.*

## 1.3 List Views

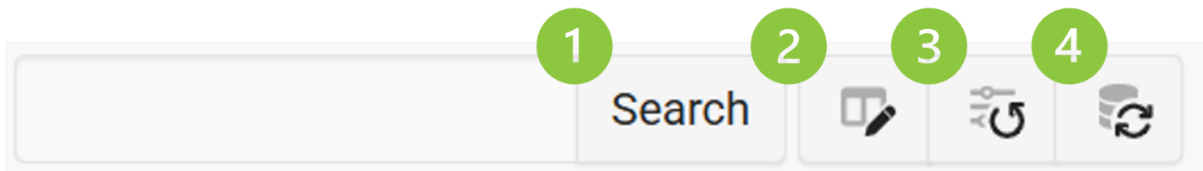 All the list views (such as the list of users or licenses) have some common features.

Above the list, you have the following options:

1. Search the list content. Enter text in a search field and click **Search** to update the list.
2. Select which columns to show on the list. Click the column edit icon, select the columns you want, and the list is updated.
3. Reset the list to clear the search and restore the default set of columns.
4. Reload the list to update it with the latest data. The lists are not refreshed automatically.




A reload button is also available in several other places for refreshing the data.

Some list views have an additional filter option. For example, on the user list, you can filter users based on their status.

On the list itself, you can do the following:

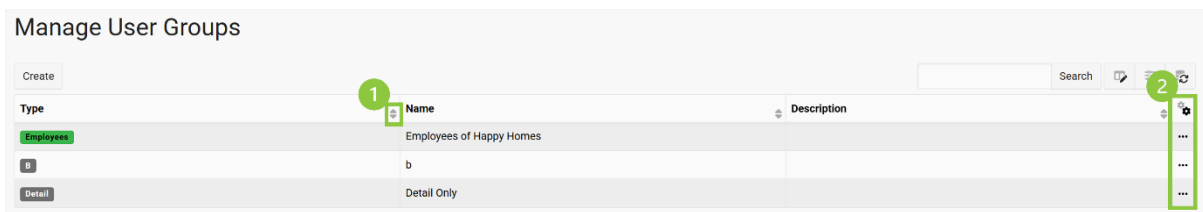 1. Sort the list by column. Change the sorting order by clicking the double arrow next to a column title.
2. In the rightmost **Tools** column, you have a three-dot menu for each item on the list.




The menu has options for that item, such as viewing the item's details.

## 1.4 Dashboard

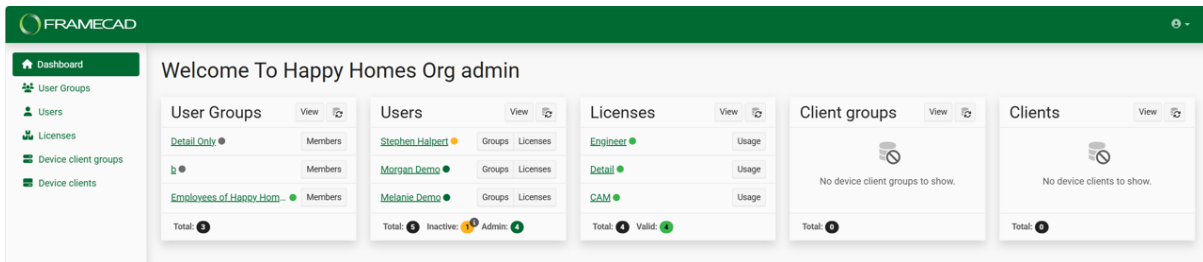The Dashboard shows some key details on your company's data and provides quick links to commonly used functions:

- **User groups**
  - Shows information on your user groups. Use the quick links to view all user groups, or users that belong to a specific group. You can also invite users to a group.
- **Users**
  - Shows information on your users. Use the quick links to view all users, or a specific user's groups or licenses.
- **Licenses**
  - Shows information on your purchased licenses. Use the quick links to view all licenses, or the usage of a specific license.



The screenshot shows the FRAMECAD dashboard interface. At the top, there is a green header with the FRAMECAD logo and a user profile icon. Below the header, a navigation sidebar on the left lists: Dashboard, User Groups, Users, Licenses, Device client groups, and Device clients. The main content area is titled 'Welcome To Happy Homes Org admin' and contains five summary cards:

- User Groups:** Shows 'Detail Only' and 'Employees of Happy Hom...' with a 'Members' link. Total: 3.
- Users:** Lists 'Stephen Halbert', 'Morgan Demo', and 'Melanie Demo' with links for 'Groups' and 'Licenses'. Total: 3, with 1 Inactive and 1 Admin.
- Licenses:** Shows 'Engineer', 'Detail', and 'CAM' with a 'Usage' link. Total: 3, with 1 Valid.
- Client groups:** Displays 'No device client groups to show.' Total: 0.
- Clients:** Displays 'No device clients to show.' Total: 0.

## 2 Users

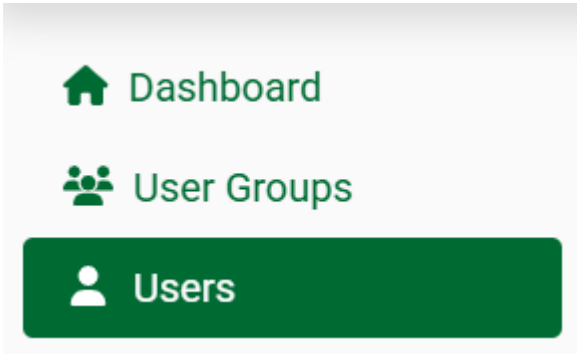
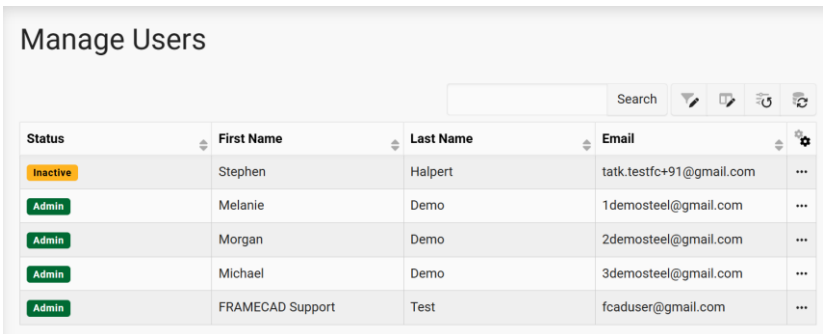
In License Administrator, you can view user accounts for your end users, which you then assign to the correct User Group. This is done as part of applying your purchased Steelwise license entitlement to your staff.

Currently, the creation of new users, granting administrator access to users, and the deletion of users are managed by FRAMECAD. Use the **Request Support** option on the Communities homepage to request any of these actions.

Please provide the user's First name, Last name, Job Title, and email address when making support requests.

### 2.1 View Users

Note: For non-administrator users, the user list shows the status: **Active** or **Inactive** (depending on whether they have been active within the past 30 days) or **Suspended** (the user's account has been disabled).

Step	Illustration																														
Click <b>Users</b> on the left menu.																															
The list of all your user and their statuses are now displayed.	 <table border="1"> <thead> <tr> <th>Status</th> <th>First Name</th> <th>Last Name</th> <th>Email</th> <th></th> </tr> </thead> <tbody> <tr> <td>Inactive</td> <td>Stephen</td> <td>Halpert</td> <td>tatk.testfc+91@gmail.com</td> <td>...</td> </tr> <tr> <td>Admin</td> <td>Melanie</td> <td>Demo</td> <td>1demosteel@gmail.com</td> <td>...</td> </tr> <tr> <td>Admin</td> <td>Morgan</td> <td>Demo</td> <td>2demosteel@gmail.com</td> <td>...</td> </tr> <tr> <td>Admin</td> <td>Michael</td> <td>Demo</td> <td>3demosteel@gmail.com</td> <td>...</td> </tr> <tr> <td>Admin</td> <td>FRAMECAD Support</td> <td>Test</td> <td>fcaduser@gmail.com</td> <td>...</td> </tr> </tbody> </table>	Status	First Name	Last Name	Email		Inactive	Stephen	Halpert	tatk.testfc+91@gmail.com	...	Admin	Melanie	Demo	1demosteel@gmail.com	...	Admin	Morgan	Demo	2demosteel@gmail.com	...	Admin	Michael	Demo	3demosteel@gmail.com	...	Admin	FRAMECAD Support	Test	fcaduser@gmail.com	...
Status	First Name	Last Name	Email																												
Inactive	Stephen	Halpert	tatk.testfc+91@gmail.com	...																											
Admin	Melanie	Demo	1demosteel@gmail.com	...																											
Admin	Morgan	Demo	2demosteel@gmail.com	...																											
Admin	Michael	Demo	3demosteel@gmail.com	...																											
Admin	FRAMECAD Support	Test	fcaduser@gmail.com	...																											

Click the **three dots** to open the Tools Menu.

Then click **Profile details**.

View user **profile details**.

Last Name	Email	
Halpert	tatk.testfc+91@gmail.com	⋮
Demo	1demosteel@	
Demo	2demosteel@	
Demo	3demosteel@	
Test	fcaduser@gmail.com	⋮

- Profile details
- Groups
- Licenses
- Download License

### Stephen Halpert: profile details 🔄

**Display Name:**

**Status:** Inactive

**Professional Title:**

**First Name:** Stephen

**Last Name:** Halpert

**Nickname:**

**Email:** [tatk.testfc+91@gmail.com](mailto:tatk.testfc+91@gmail.com)

**Phone Number:**

Close

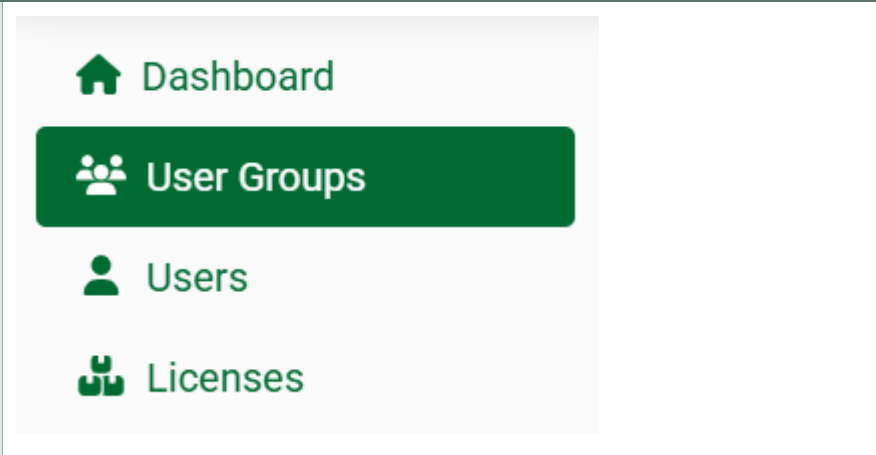
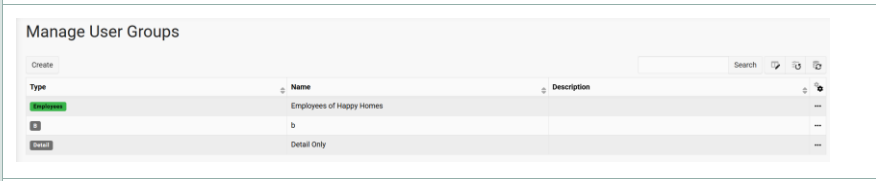

## 3 User Groups

In License Administrator, you can create user groups to control your users' access to licenses.

Create groups and assign users to them based on the user persona and which software entitlement they should have access to

You cannot grant an individual user access to licenses directly—the authorization always comes through a group.

### 3.1 View User Groups

Step	Illustration												
<p>Click <b>User Groups</b> on the left menu.</p>													
<p>The list of all your user groups is now displayed.</p>	 <table border="1"> <thead> <tr> <th>Type</th> <th>Name</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Employee</td> <td>Employees of Happy Homes</td> <td></td> </tr> <tr> <td></td> <td>b</td> <td></td> </tr> <tr> <td></td> <td>Detail Only</td> <td></td> </tr> </tbody> </table>	Type	Name	Description	Employee	Employees of Happy Homes			b			Detail Only	
Type	Name	Description											
Employee	Employees of Happy Homes												
	b												
	Detail Only												
<p>Click the <b>three dots</b> to open the Tools Menu.</p> <p>Then click <b>View details</b></p>													

A dialog opens, displaying the group's details.

Click on the **Entitlement Name** to check which licenses the group has access to.

### User group details 🔄

---

**Name:** Detail Only

**Type:** Detail

**Description:**

**Entitlements:** Steelwise SUB-000100

---

Close
Edit

Clicking an entitlement opens the **Entitlement Details** dialog, which shows the licenses it holds.

### Entitlement details 🔄

---

**Name:** Steelwise SUB-000100

**Consuming user groups:**  
[b, Detail Only](#), [Employees of Happy Homes](#)

**Consuming device client groups:**  
 No consuming device client groups

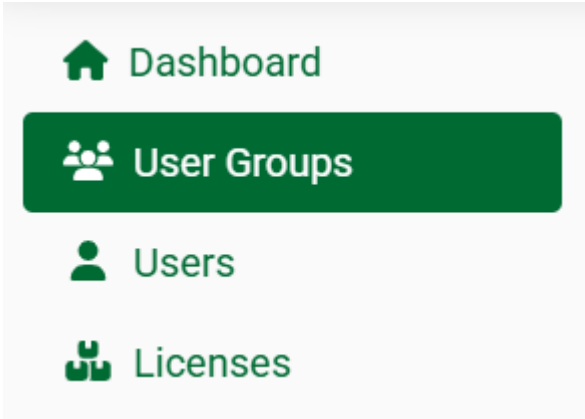
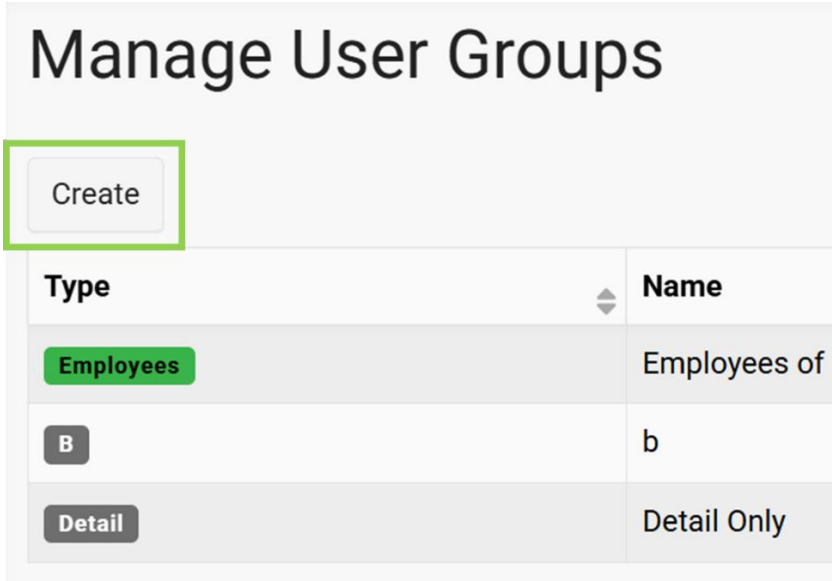
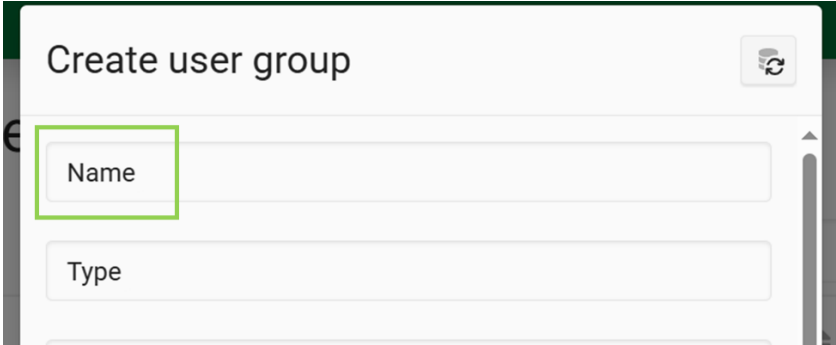
**Assigned licenses:** [Detail](#), [CAM](#)

---

Close

## 3.2 Create a User Group

You can give the new group access to licenses right away or wait until later. You can also add existing users to the group or invite or import new and existing users to the group.

Step	Illustration								
<p>Click <b>User Groups</b> on the left menu.</p>	 <p>The screenshot shows a dashboard with four menu items: 'Dashboard' (home icon), 'User Groups' (group of people icon, highlighted in green), 'Users' (person icon), and 'Licenses' (two people icon).</p>								
<p>Click <b>Create</b>.</p>	 <p>The screenshot shows the 'Manage User Groups' page. A 'Create' button is highlighted with a green box. Below it is a table with columns 'Type' and 'Name'.</p> <table border="1" data-bbox="544 1323 1374 1637"> <thead> <tr> <th>Type</th> <th>Name</th> </tr> </thead> <tbody> <tr> <td>Employees</td> <td>Employees of</td> </tr> <tr> <td>B</td> <td>b</td> </tr> <tr> <td>Detail</td> <td>Detail Only</td> </tr> </tbody> </table>	Type	Name	Employees	Employees of	B	b	Detail	Detail Only
Type	Name								
Employees	Employees of								
B	b								
Detail	Detail Only								
<p>Define a <b>name</b> for the group.</p>	 <p>The screenshot shows the 'Create user group' form. The 'Name' input field is highlighted with a green box. Below it is a 'Type' input field.</p>								

Enter a custom **type** or select the predefined group "Employees."

Optionally, enter a **description**.

Check the box to the left of an **entitlement** to grant access to its licenses to users of this user group.

### Create user group

Name

Type

Description

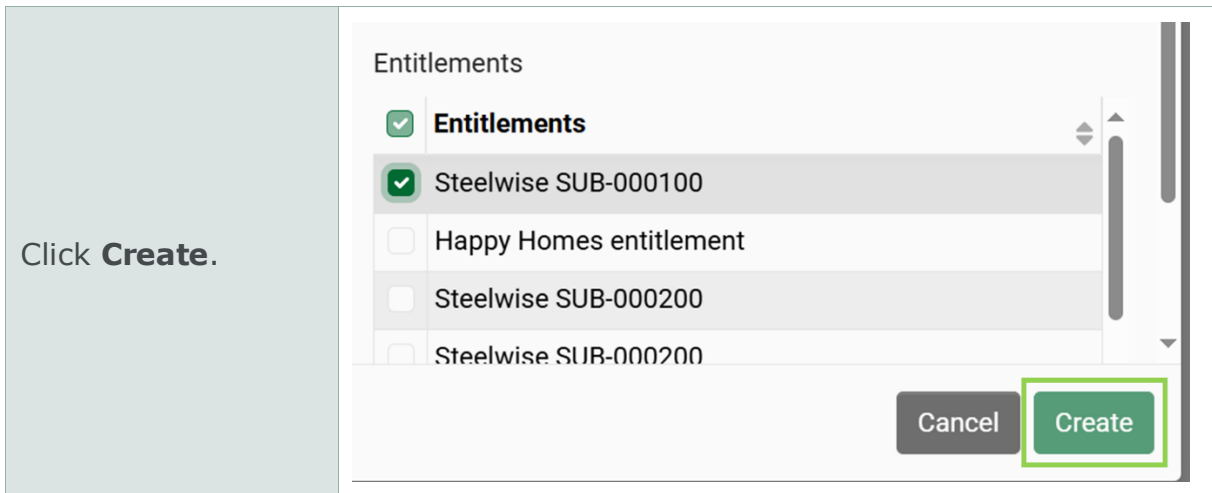 
Entitlements

- Entitlements
- Steelwise SUB-000100
- Happy Homes entitlement
- Steelwise SUB-000200
- Steelwise SUB-000200

Entitlements

- Entitlements
- Steelwise SUB-000100
- Happy Homes entitlement
- Steelwise SUB-000200
- Steelwise SUB-000200



Cancel Create



Click **Create**.

### 3.3 Edit a User Group

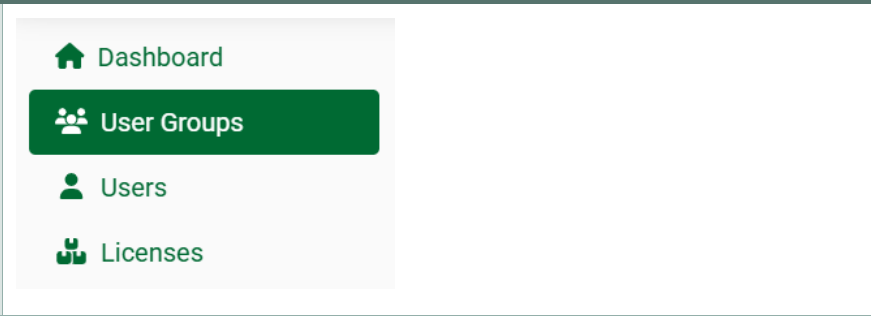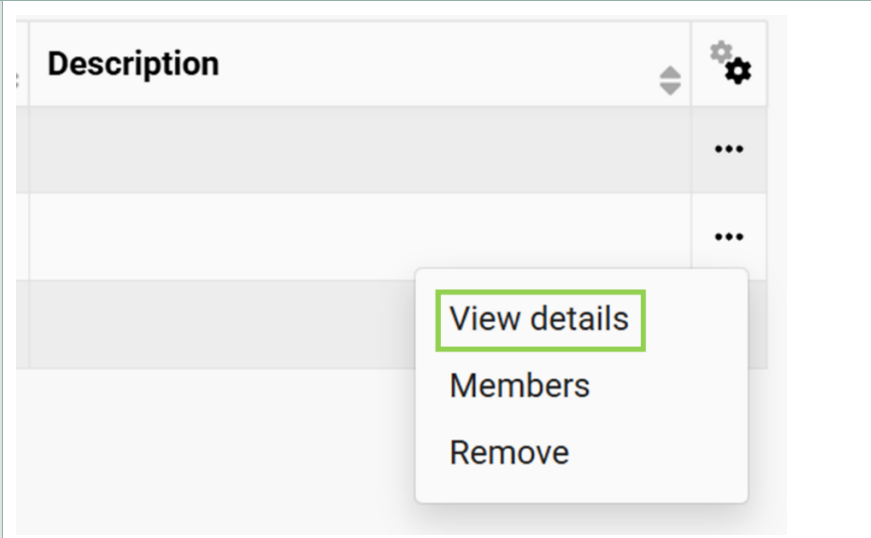You can edit a user group's details and define which entitlements (licenses) the group can access:

Step	Illustration
<p>Click <b>User Groups</b> on the left menu.</p>	
<p>Click the <b>three dots</b> to open the Tools Menu.</p> <p>Then click <b>View details</b>.</p>	

Click **Edit** in the dialog.

### User group details

**Name:** Employees of Happy Homes

**Type:** Employees

**Description:**

**Entitlements:**

[Steelwise SUB-000100](#), [Steelwise SUB-000200](#), [Steelwise SUB-000200](#), [Steelwise TEST\\_SUB-000200](#)

Close
Edit

Edit the desired details.

### Edit user group details

Name

Type

ⓘ The type of "employees" group cannot be edited.

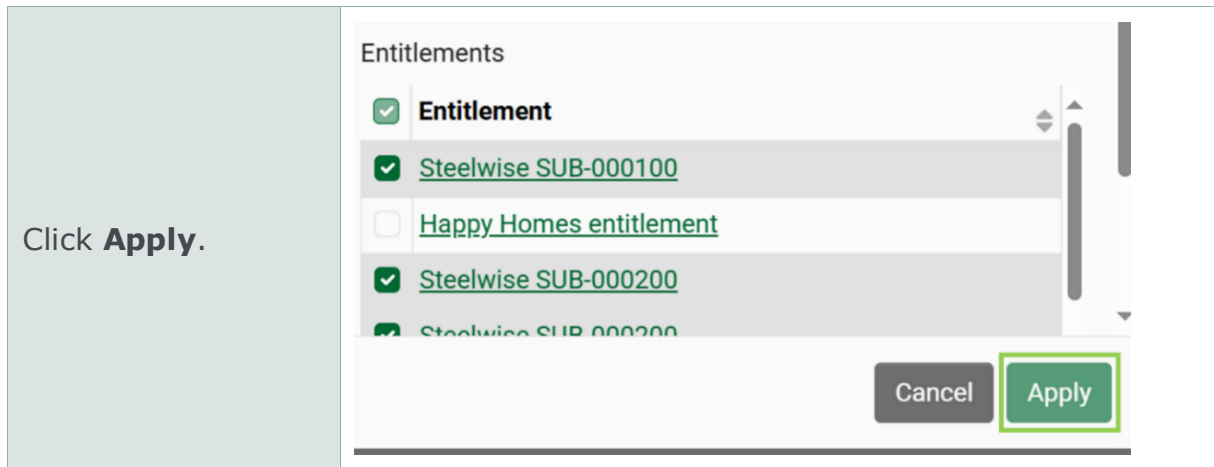 
Description

Change the **entitlements** the group has access to by checking or unchecking the boxes to the left of them.

#### Entitlements

<input checked="" type="checkbox"/> Entitlement
<input checked="" type="checkbox"/> <a href="#">Steelwise SUB-000100</a>
<input type="checkbox"/> <a href="#">Happy_Homes entitlement</a>
<input checked="" type="checkbox"/> <a href="#">Steelwise SUB-000200</a>
<input checked="" type="checkbox"/> <a href="#">Steelwise SUB-000200</a>

Cancel
Apply



### 3.4 Delete a User Group

You can delete user groups, if needed, except for the predefined **employees** group. Deleting a user group does not delete the users who belonged to that group.

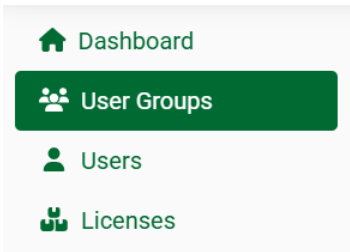
The users in the deleted group lose access to the licenses that the group had access to, unless they still have access to the licenses through some other group. If the users have any seat reservations to the licenses, those are also released.



**Note:** If a user no longer belongs to any group, they will not be visible anymore.

- If an administrator user no longer belongs to any of your user groups, this does not automatically remove their administrator access. If needed, make sure to first remove their administrator access, and then delete the user group.

Instead of deleting a user group, you also have the option of removing the group's access to licenses. See above how to edit a group.

To delete a user group:

Step	Illustration
Click <b>User Groups</b> on the left menu.	
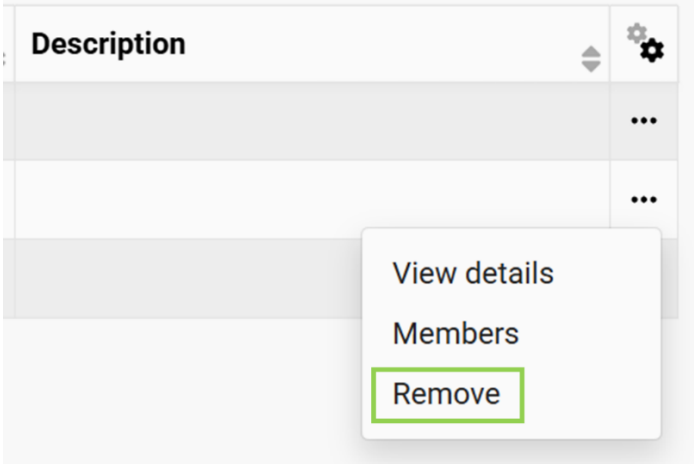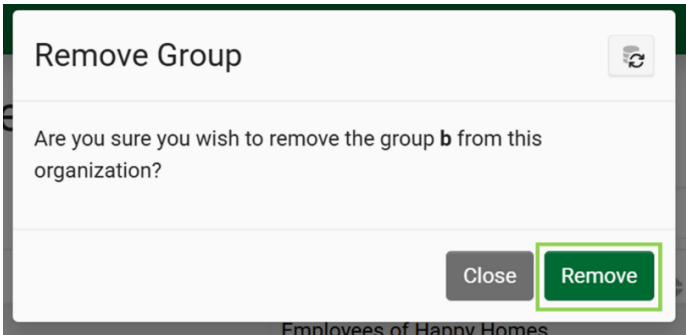
<p>Click the <b>three dots</b> to open the Tools Menu.</p> <p>Then click <b>Remove</b>.</p>	
<p>Click <b>Remove</b> in the dialog that opens to confirm.</p>	

Note: If a user is currently using a license they no longer have access to, they are able to continue using the license until the license lease expires or the software application attempts to refresh the license lease, whichever comes first.

## 4 License Entitlements

### 4.1 Manage Access to Licenses

Access to licenses is based on group access to entitlements:

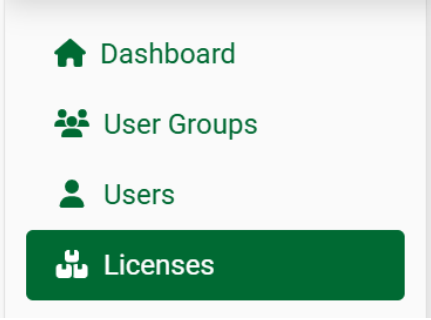
1. You set up user groups and grant the groups access to the entitlements that hold licenses.
2. Then you associate users with applicable groups. This allows them to use the licenses that their groups have access to.

Note: if a user belongs to multiple groups, they will have access to all licenses from all the entitlements assigned to all the groups they belong to. When the user launches Steelwise, they will be assigned (check out) licenses for all available modules from the entitlements they have been given access to.

See instructions below on how to add existing users to groups. You can also remove a user from the whole company (all user groups) in one step.

If needed, you can also block users from using a license.

#### 4.1.1 View which Groups can Access a License

Step	Illustration
Click <b>Licenses</b> on the left menu.	

Click the **three dots** to open the Tools Menu.

Then click **License details**.

Seats: Consumed	Seats: Available	
0	3	...
1		
0	2	...

License details

Usage

Download license

Click the **entitlement** name.

### License details

**Name:** Detail

**State:** Valid

**Entitlement:** [Steelwise SUB-000200](#)

**Valid from:** 4/16/2025 **Valid until:** 4/15/2026

**Allowed versions:** -

**Model:** Floating

**View** the user groups with access to the license.

### Entitlement details

**Name:** Steelwise SUB-000200

**Consuming user groups:** [Employees of Happy Homes](#)

**Consuming device client groups:**  
No consuming device client groups

**Assigned licenses:** [Detail](#), [Engineer](#)

Close

### 4.1.2 Assign Users to Groups

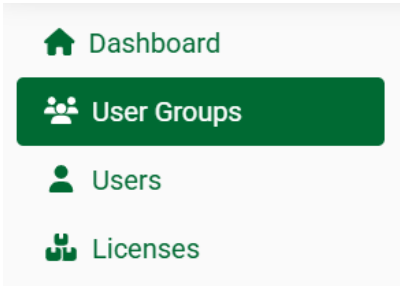
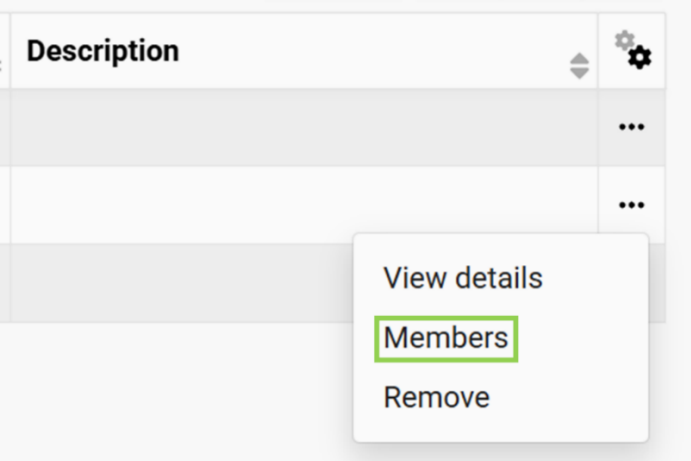
Add users to a group to give them access to the licenses that a user group has access to.

If you remove a user from a group, they lose access to the group's licenses and their seat reservations for the licenses are released, unless they belong to another group that still allows them access to those licenses.


If the removed user is currently using a license they no longer have access to, they are able to continue using the license until the license lease expires or the software application tries to refresh the lease, whichever comes first.

**Note:** If you remove a user from all your user groups, they will not be visible anymore.


To define which users belong to a group:

Step	Illustration
Click <b>User Groups</b> on the left menu.	
Click the <b>three dots</b> to open the Tools Menu.  Then click <b>Members</b>	

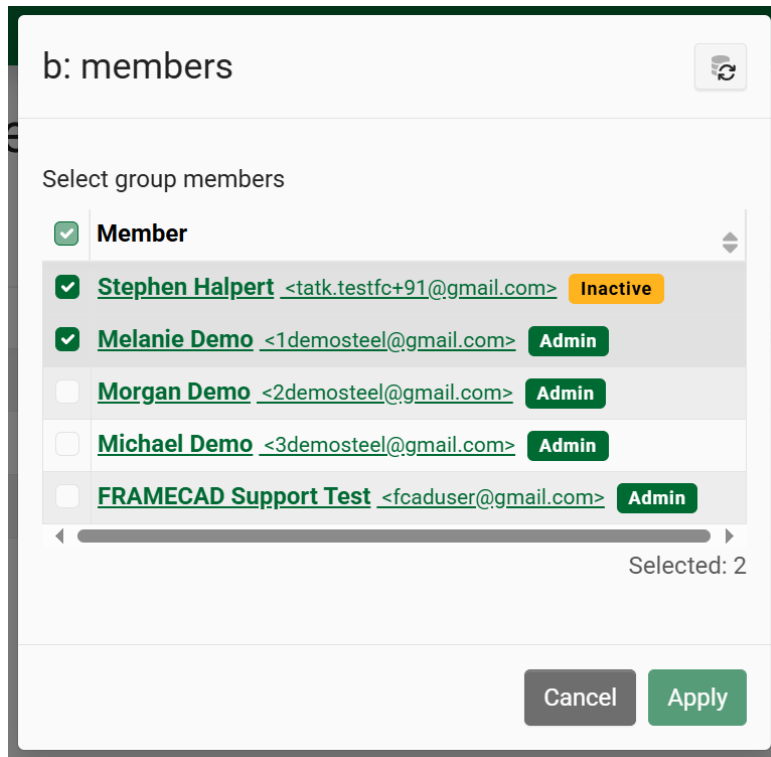
View the **users** that are already in the user group by noting which are selected.



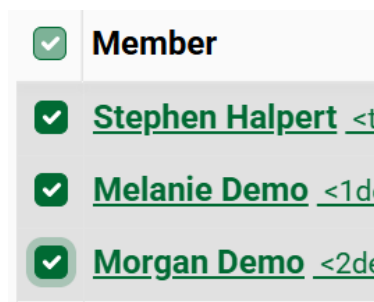Select **users** to be in the group by checking the box to the left of their name or remove users by unchecking the box.



Click **Apply**.

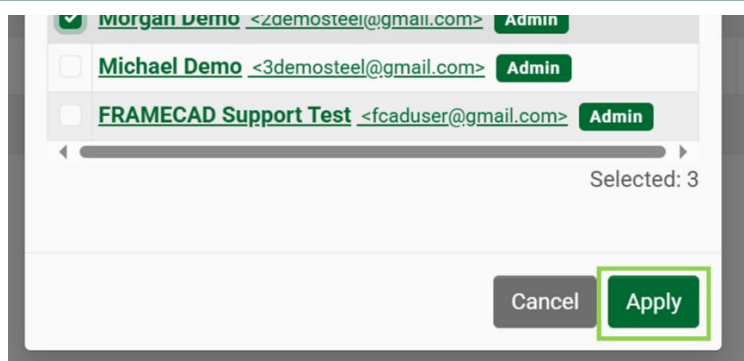

Click **Yes** to confirm.

b: confirm members 🔄

---



Are you sure you wish to apply the following changes to the group memberships?

**Members to add**

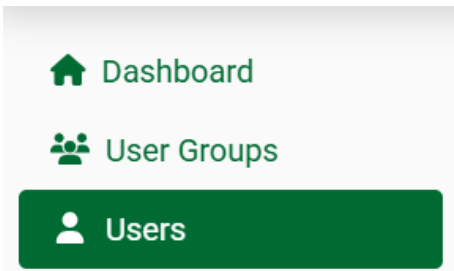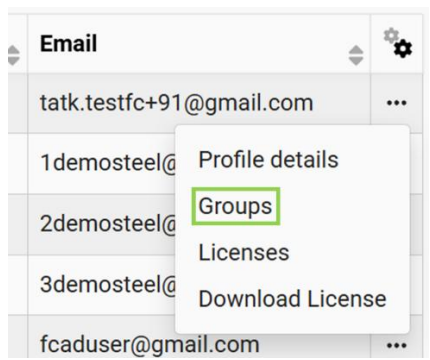
- Morgan Demo

No
Yes


Or, change which groups a specific user belongs to:

Step	Illustration
<p>Click <b>Users</b> on the left menu.</p>	
<p>Click the <b>three dots</b> to open the Tools Menu.</p> <p>Then click <b>Groups</b>.</p>	

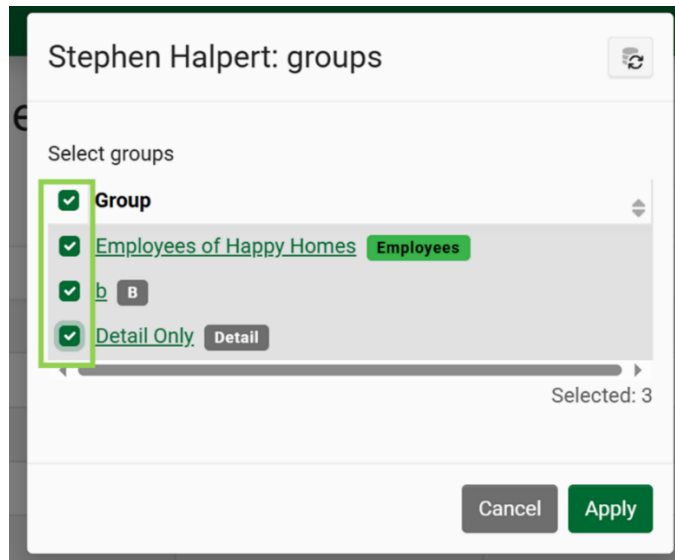 
**Check** the box to the left of the User Group(s) you wish the user to be a part of or uncheck the User Groups you wish for them not to be.



Click **Apply**.

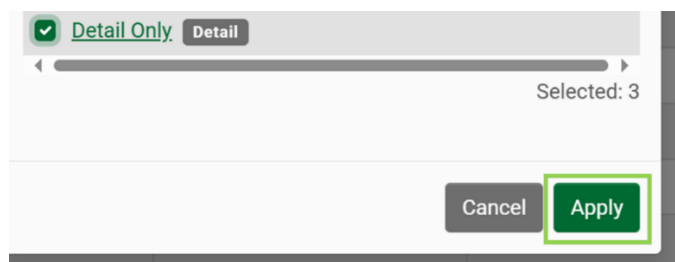 

Click **Yes** to confirm.



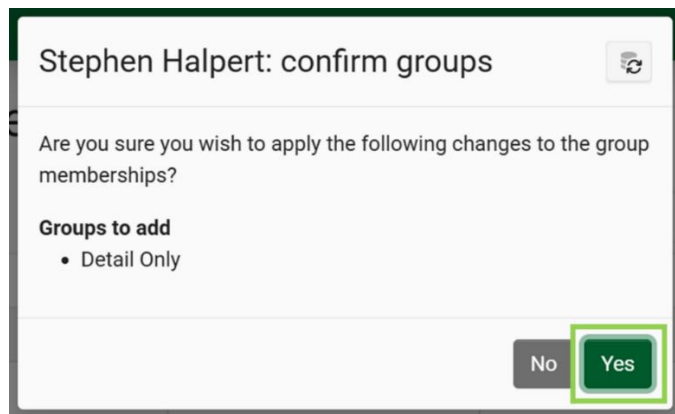 


#### 4.1.2.1 Block a User from Using a License


If needed, you can block a user from using a seat-based license. The user cannot use the blocked license even if they have access to it through a group. The user is also blocked from downloading an offline license.

If the user is currently using a license that you block for them, they can continue using the license until the license lease expires or the software application tries to refresh the lease, whichever comes first.

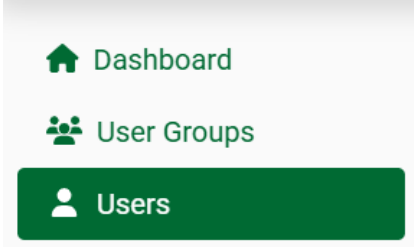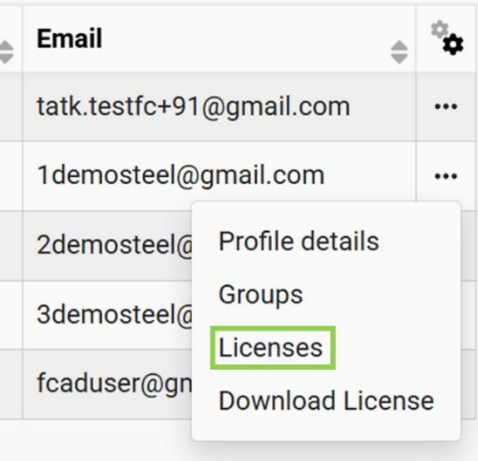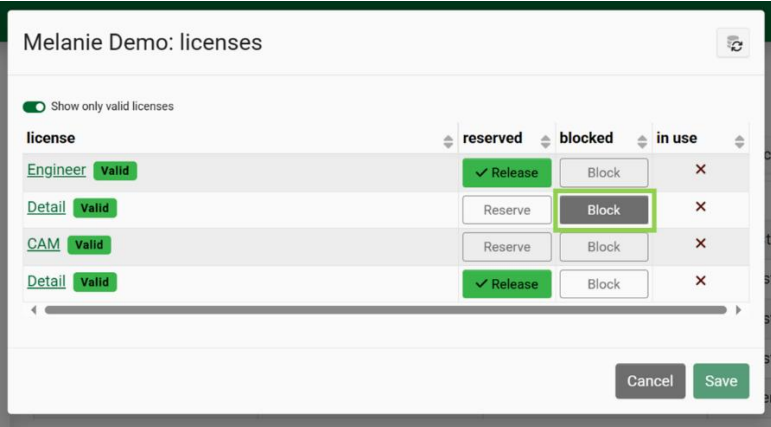
To block licenses for a user:

Step	Illustration
<p>Click <b>Users</b> on the left menu.</p>	
<p>Click the <b>three dots</b> to open the Tools Menu.</p> <p>Then click <b>Licenses</b>.</p>	
<p>Click <b>Block</b> in the Blocked column to block a license.</p> <p>Note: If the user has a seat reservation for the license, blocking releases it.</p>	

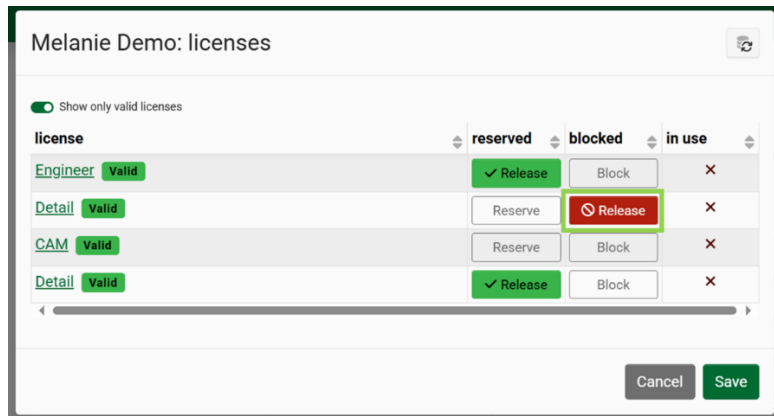 
Click **Release** to unblock a license.



Click **Save**.

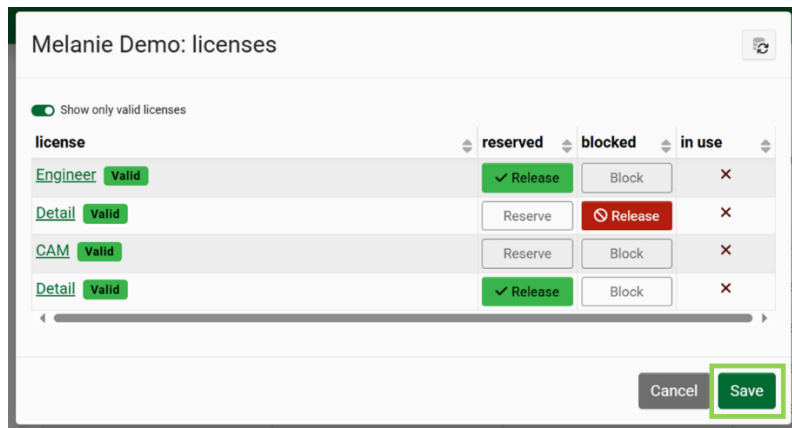 

Click **Yes** to confirm.

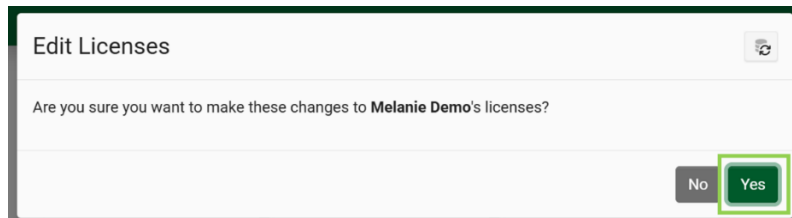 


Or, to block a license for multiple users at a time:

Step


Illustration

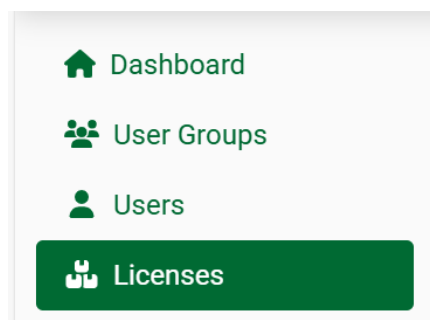 Click **Licenses** on the left menu.




Click the **three dots** to open the Tools Menu.

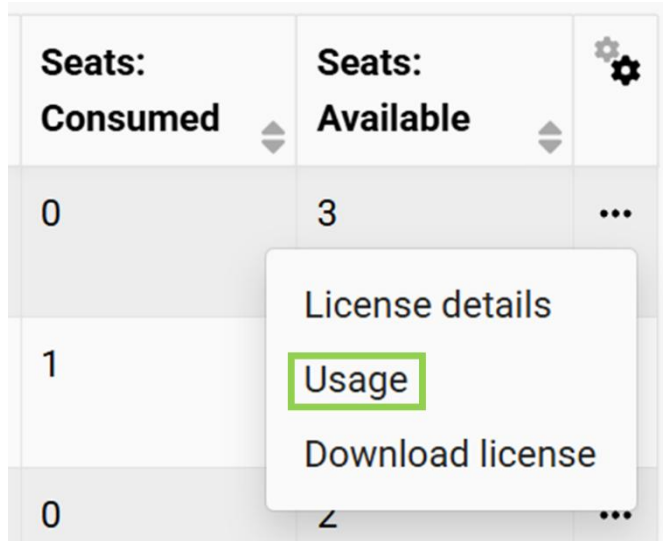 
Then click **Usage**.



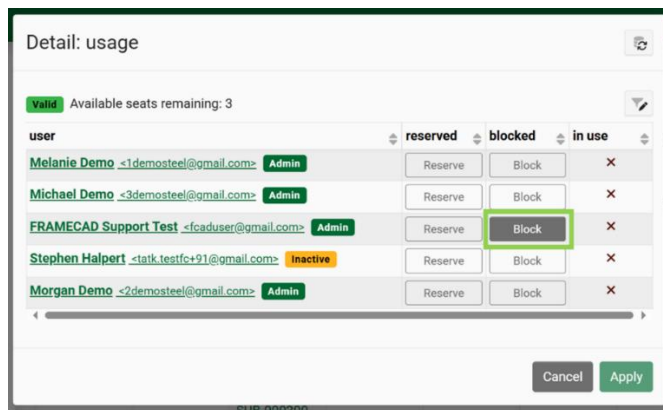 
**Block** users by selecting the box in the Blocked column or unblock users by selecting **Release**.



Click **Apply**.

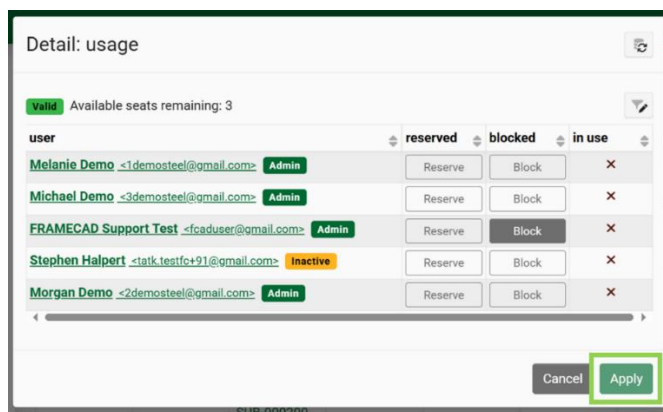 

Click **Confirm**.

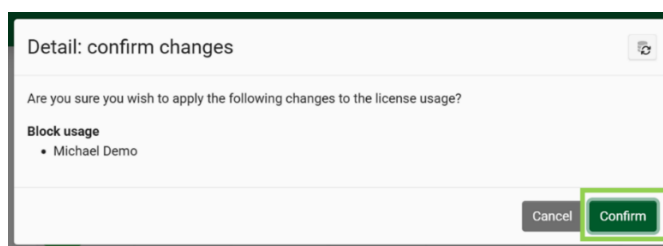 

## 4.2 Manage Licenses

You can view information on the licenses you have purchased, for example, how many seats you have.

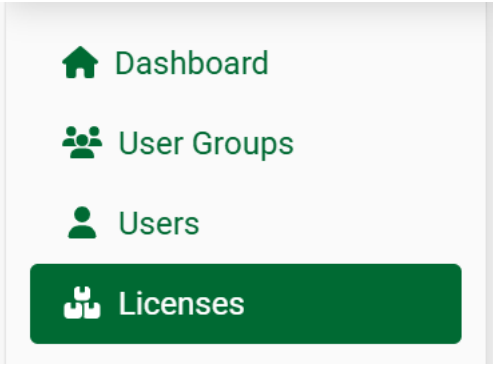
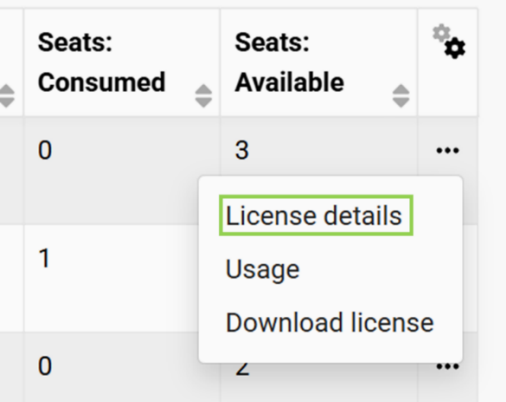
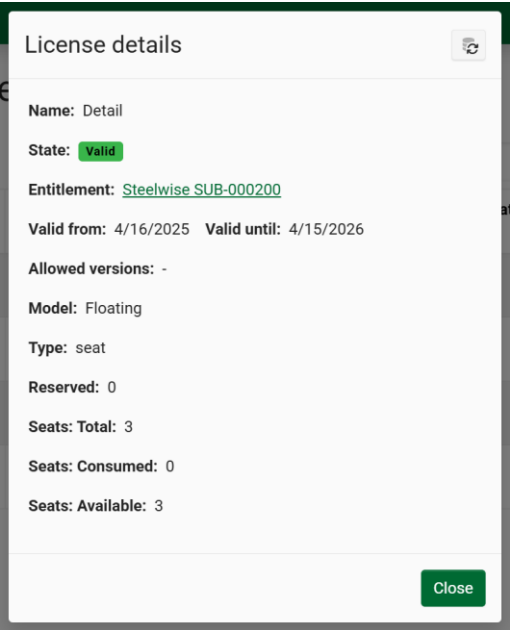
Your licenses are organized into one or more entitlements: containers that hold the licenses and that you also use for managing user access to the licenses.

When a user starts using a license, this starts a license lease in the system—a time-limited authorization for that user to use the license. The lease defines how the license allows using the software application, for example, which features are allowed, and when the authorization expires.

### 4.2.1 View Licenses

1. In the left sidebar, go to **Licenses**.
  - a. The list of your company's licenses opens, displaying information on each license:
    - i. **State**: The license status: **Valid, Scheduled** (the validity period has not started yet), **Expiring** (the validity ends within 7 days), **Expired**, or **Deactivated**.
    - ii. **Valid from** and **Valid until**: The validity start and end date.
    - iii. **Name**: The name of the license.
    - iv. **Entitlement**: The entitlement that holds the license.
    - v. **Model**: How seats in a seat-based license are handled: We use **Floating Licenses**: Either the license seats are used from a floating pool, or the license uses named seats but no advance reservations are needed.
    - vi. **Type**: The type of credit the license has: seats, use count, or use time (currently only "seats" type is use).
    - vii. **Reserved**: The number of seats that have been reserved from a seat-based license.
    - viii. **Seats: total**: The total number of seats in a seat-based license.
    - ix. **Seats: consumed**: The number of seats in a seat-based license that are currently in use.
    - x. **Seats: available**: The number of seats in a seat-based license that are currently not being used. Reserved seats are excluded from the available seats.
    - xi. **Allowed versions**: The software versions that the license allows to use (not currently used by FRAMECAD).

To view a license's details:

Step	Illustration
<p>Click <b>Licenses</b> on the left menu.</p>	
<p>Click the <b>three dots</b> to open the Tools Menu.</p> <p>Then click <b>License details</b></p>	
<p><b>View</b> the license details.</p>	



## 4.2.2 Reserve License Seats

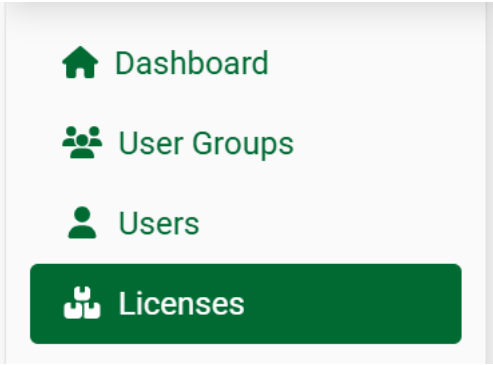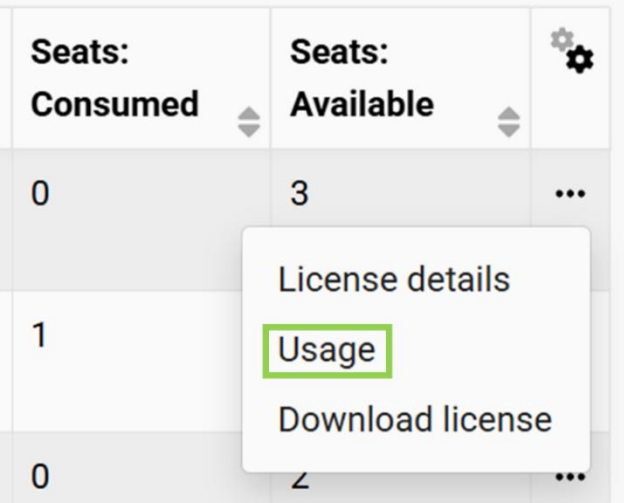With seat-based licenses, you can reserve a seat for a user.


Steelwise uses floating seats, so reservations are not mandatory. You may choose to use seat reservations, for example, to make sure certain users always have access to the software application.

To change seat reservations for a license:

**Note:** When reserving a license seat, if the Reserve button is disabled, there are no available seats left in the license.

Step	Illustration												
<p>Click <b>Licenses</b> on the left menu.</p>													
<p>Click the <b>three dots</b> to open the Tools Menu.</p> <p>Then click <b>Usage</b>.</p>	 <table border="1"> <thead> <tr> <th data-bbox="549 1227 810 1361">Seats: Consumed</th> <th data-bbox="810 1227 1072 1361">Seats: Available</th> <th data-bbox="1072 1227 1161 1361"></th> </tr> </thead> <tbody> <tr> <td data-bbox="549 1361 810 1505">0</td> <td data-bbox="810 1361 1072 1505">3</td> <td data-bbox="1072 1361 1161 1505">...</td> </tr> <tr> <td data-bbox="549 1505 810 1648">1</td> <td data-bbox="810 1505 1072 1648"></td> <td data-bbox="1072 1505 1161 1648">...</td> </tr> <tr> <td data-bbox="549 1648 810 1720">0</td> <td data-bbox="810 1648 1072 1720">2</td> <td data-bbox="1072 1648 1161 1720">...</td> </tr> </tbody> </table>	Seats: Consumed	Seats: Available		0	3	...	1		...	0	2	...
Seats: Consumed	Seats: Available												
0	3	...											
1		...											
0	2	...											

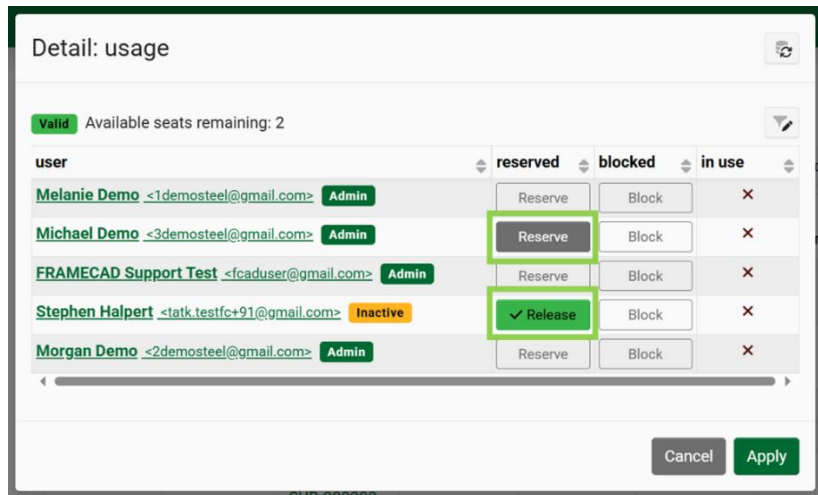**Reserve** a license seat for a user by selecting the box in the Reserved column or release a seat license by selecting **Release**.




Detail: usage

**Valid** Available seats remaining: 2

user	reserved	blocked	in use
Melanie Demo <1demosteel@gmail.com> Admin	Reserve	Block	×
Michael Demo <3demosteel@gmail.com> Admin	Reserve	Block	×
FRAMECAD Support Test <fcaduser@gmail.com> Admin	Reserve	Block	×
Stephen Halpert <tatk.testfc+91@gmail.com> Inactive	✓ Release	Block	×
Morgan Demo <2demosteel@gmail.com> Admin	Reserve	Block	×

Cancel Apply

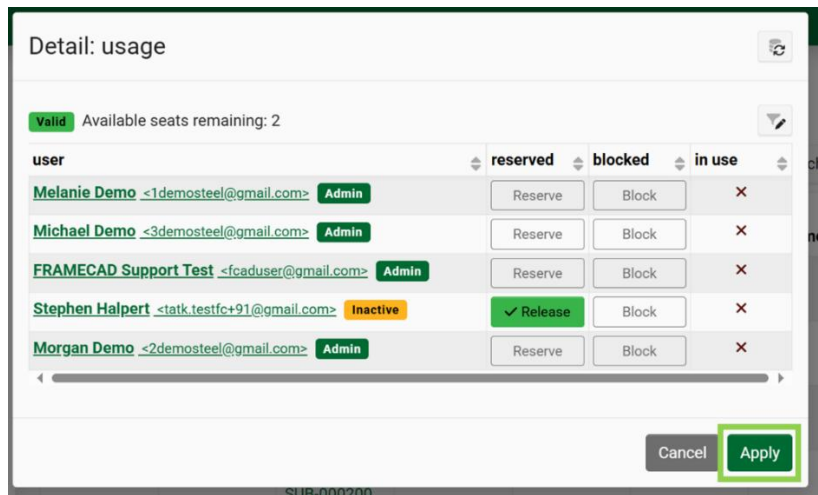Click **Apply**.




Detail: usage

**Valid** Available seats remaining: 2

user	reserved	blocked	in use
Melanie Demo <1demosteel@gmail.com> Admin	Reserve	Block	×
Michael Demo <3demosteel@gmail.com> Admin	Reserve	Block	×
FRAMECAD Support Test <fcaduser@gmail.com> Admin	Reserve	Block	×
Stephen Halpert <tatk.testfc+91@gmail.com> Inactive	✓ Release	Block	×
Morgan Demo <2demosteel@gmail.com> Admin	Reserve	Block	×

Cancel Apply

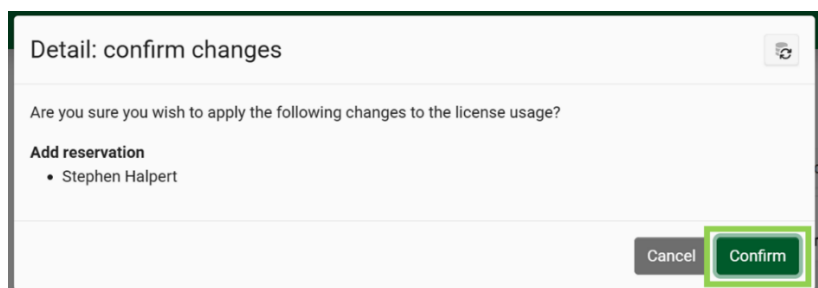Click **Confirm**.



Detail: confirm changes




Are you sure you wish to apply the following changes to the license usage?

**Add reservation**

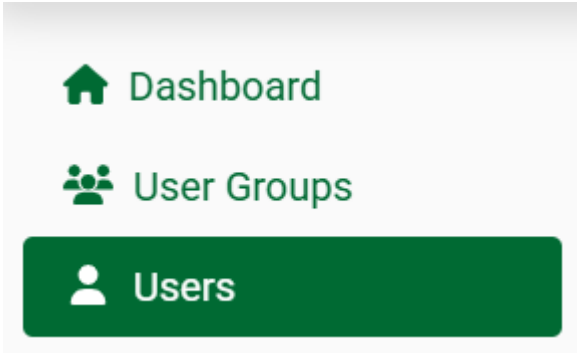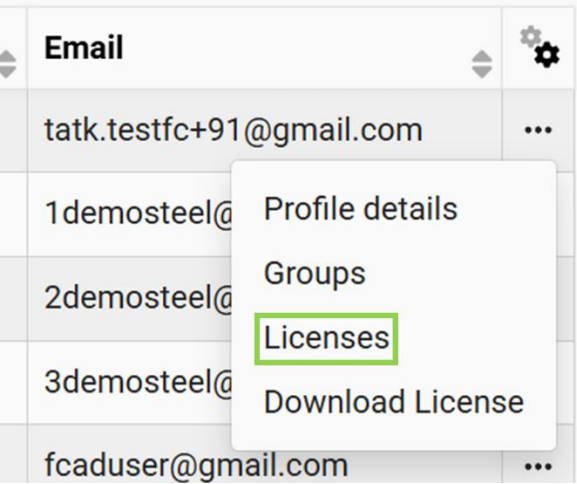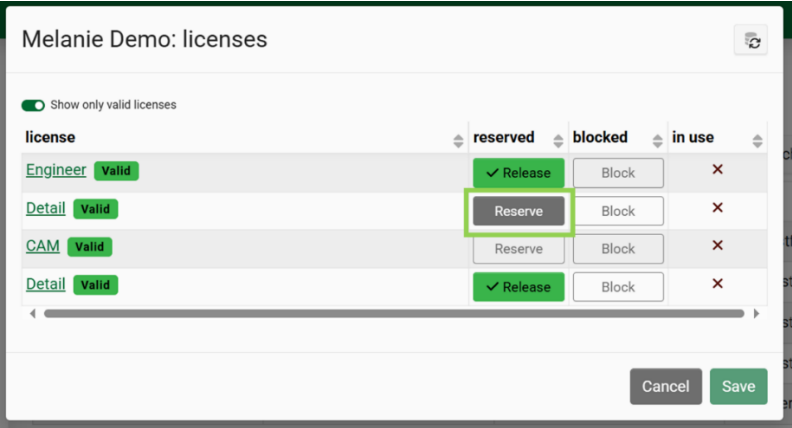
- Stephen Halpert

Cancel Confirm


You can also change an individual user's seat reservations on the user list:

Step	Illustration
<p>Click <b>Users</b> on the left menu.</p>	
<p>Click the <b>three dots</b> to open the Tools Menu.</p> <p>Then click <b>Licenses</b>.</p>	
<p><b>Reserve</b> a license seat for a user by selecting the box in the Reserved column.</p>	

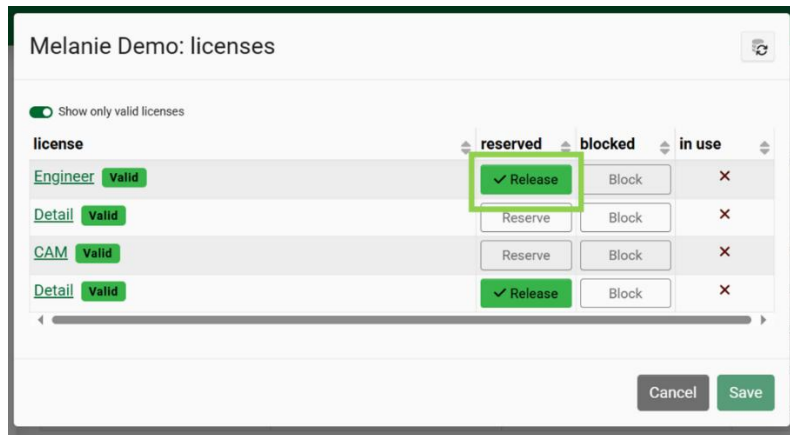 Click **Release** to unblock a license.



Click **Save**.

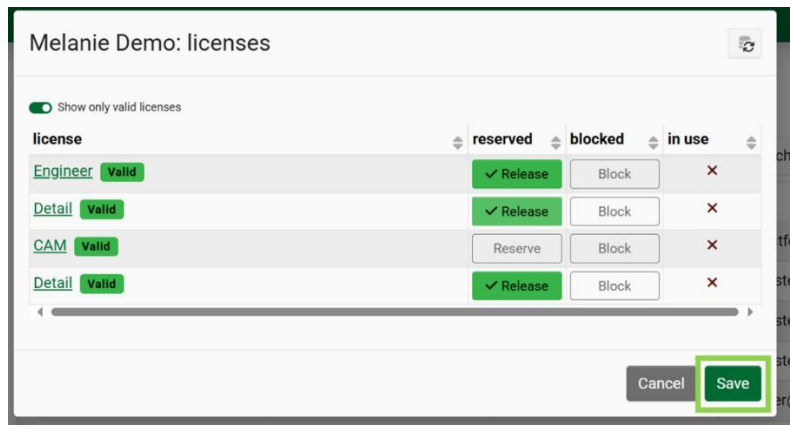 



## 4.3 View License Usage

You can view usage information on your licenses.


### 4.3.1 View Usage of a License

Note: The **IN USE** column shows usage information for the users currently using the license:

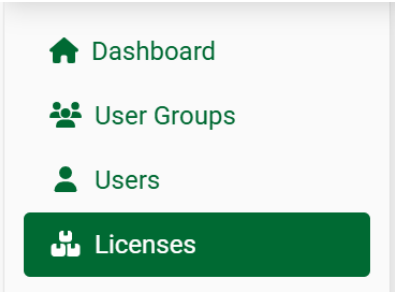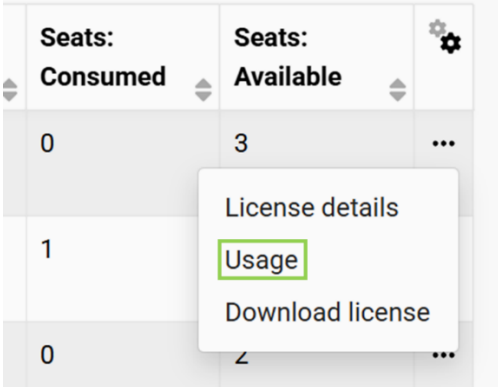1. The hardware ID of the device on which the software application is being used.
2. The validity start and end of the user's current authorization to use the software (their license lease).



Step	Illustration																																													
Click <b>Licenses</b> on the left menu.																																														
View the <b>license list</b> which shows the total, used, and currently available credit for licenses.	<p>Manage Licenses</p> <table border="1"> <thead> <tr> <th>State</th> <th>Name</th> <th>Entitlement</th> <th>Type</th> <th>Reserved</th> <th>Seats: Total</th> <th>Seats: Consumed</th> <th>Seats: Available</th> <th></th> </tr> </thead> <tbody> <tr> <td>Valid</td> <td>Detail</td> <td><a href="#">Steelwise SUB-000200</a></td> <td>seat</td> <td>0</td> <td>3</td> <td>0</td> <td>3</td> <td>...</td> </tr> <tr> <td>Valid</td> <td>Detail</td> <td><a href="#">Steelwise SUB-000100</a></td> <td>seat</td> <td>1</td> <td>2</td> <td>1</td> <td>1</td> <td>...</td> </tr> <tr> <td>Valid</td> <td>CAM</td> <td><a href="#">Steelwise SUB-000100</a></td> <td>seat</td> <td>0</td> <td>2</td> <td>0</td> <td>2</td> <td>...</td> </tr> <tr> <td>Valid</td> <td>Engineer</td> <td><a href="#">Steelwise SUB-000200</a></td> <td>seat</td> <td>1</td> <td>3</td> <td>1</td> <td>2</td> <td>...</td> </tr> </tbody> </table>	State	Name	Entitlement	Type	Reserved	Seats: Total	Seats: Consumed	Seats: Available		Valid	Detail	<a href="#">Steelwise SUB-000200</a>	seat	0	3	0	3	...	Valid	Detail	<a href="#">Steelwise SUB-000100</a>	seat	1	2	1	1	...	Valid	CAM	<a href="#">Steelwise SUB-000100</a>	seat	0	2	0	2	...	Valid	Engineer	<a href="#">Steelwise SUB-000200</a>	seat	1	3	1	2	...
State	Name	Entitlement	Type	Reserved	Seats: Total	Seats: Consumed	Seats: Available																																							
Valid	Detail	<a href="#">Steelwise SUB-000200</a>	seat	0	3	0	3	...																																						
Valid	Detail	<a href="#">Steelwise SUB-000100</a>	seat	1	2	1	1	...																																						
Valid	CAM	<a href="#">Steelwise SUB-000100</a>	seat	0	2	0	2	...																																						
Valid	Engineer	<a href="#">Steelwise SUB-000200</a>	seat	1	3	1	2	...																																						
Click the <b>three dots</b> to open the Tools Menu.  Then click <b>Usage</b> .																																														

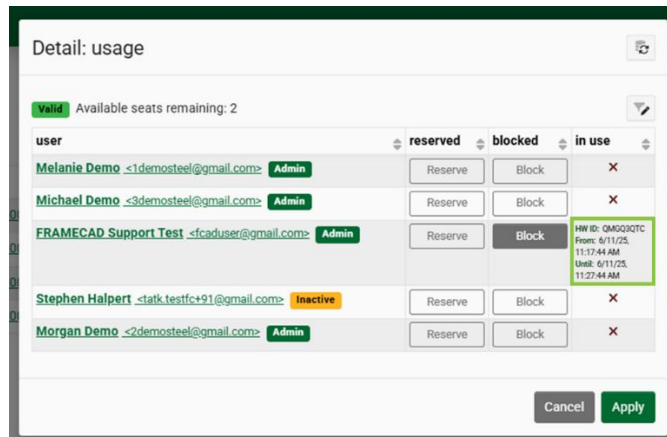 View the user's usage information under the **IN USE** column.



### 4.3.2 View Current License Usage for a User

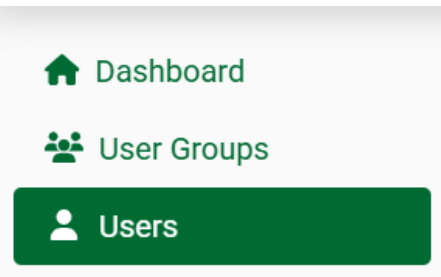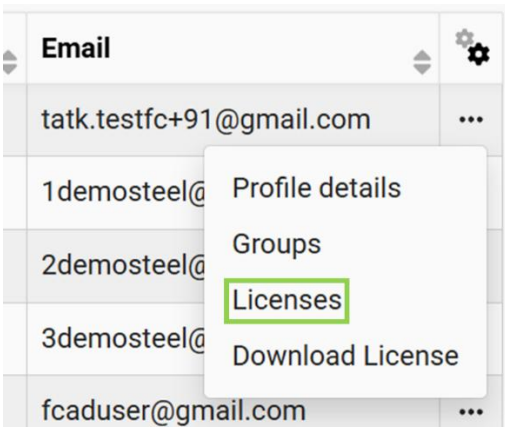1. In the left sidebar, go to **Users**.
2. Click the **Tools** menu > **Licenses** for the user.
  - a. A dialog opens, showing the same usage information as above for the licenses that the user has access to.

Step	Illustration
Click <b>Users</b> on the left menu.	
Click the <b>three dots</b> to open the Tools Menu.  Then click <b>Licenses</b> .	

View the user's usage information under the **IN USE** column.

FRAMECAD Support Test: licenses 🔄

Show only valid licenses

license	reserved	blocked	in use
Engineer <span style="color: green; font-weight: bold;">Valid</span>	Reserve	Block	✗
Detail <span style="color: green; font-weight: bold;">Valid</span>	✓ Release	Block	HW ID: QMGQ3QTC From: 6/12/25, 9:11:09 AM Until: 6/12/25, 9:21:09 AM
CAM <span style="color: green; font-weight: bold;">Valid</span>	Reserve	Block	✗
Detail <span style="color: green; font-weight: bold;">Valid</span>	Reserve	Block	✗

Cancel
Save