



Steelwise Licensing Handbook

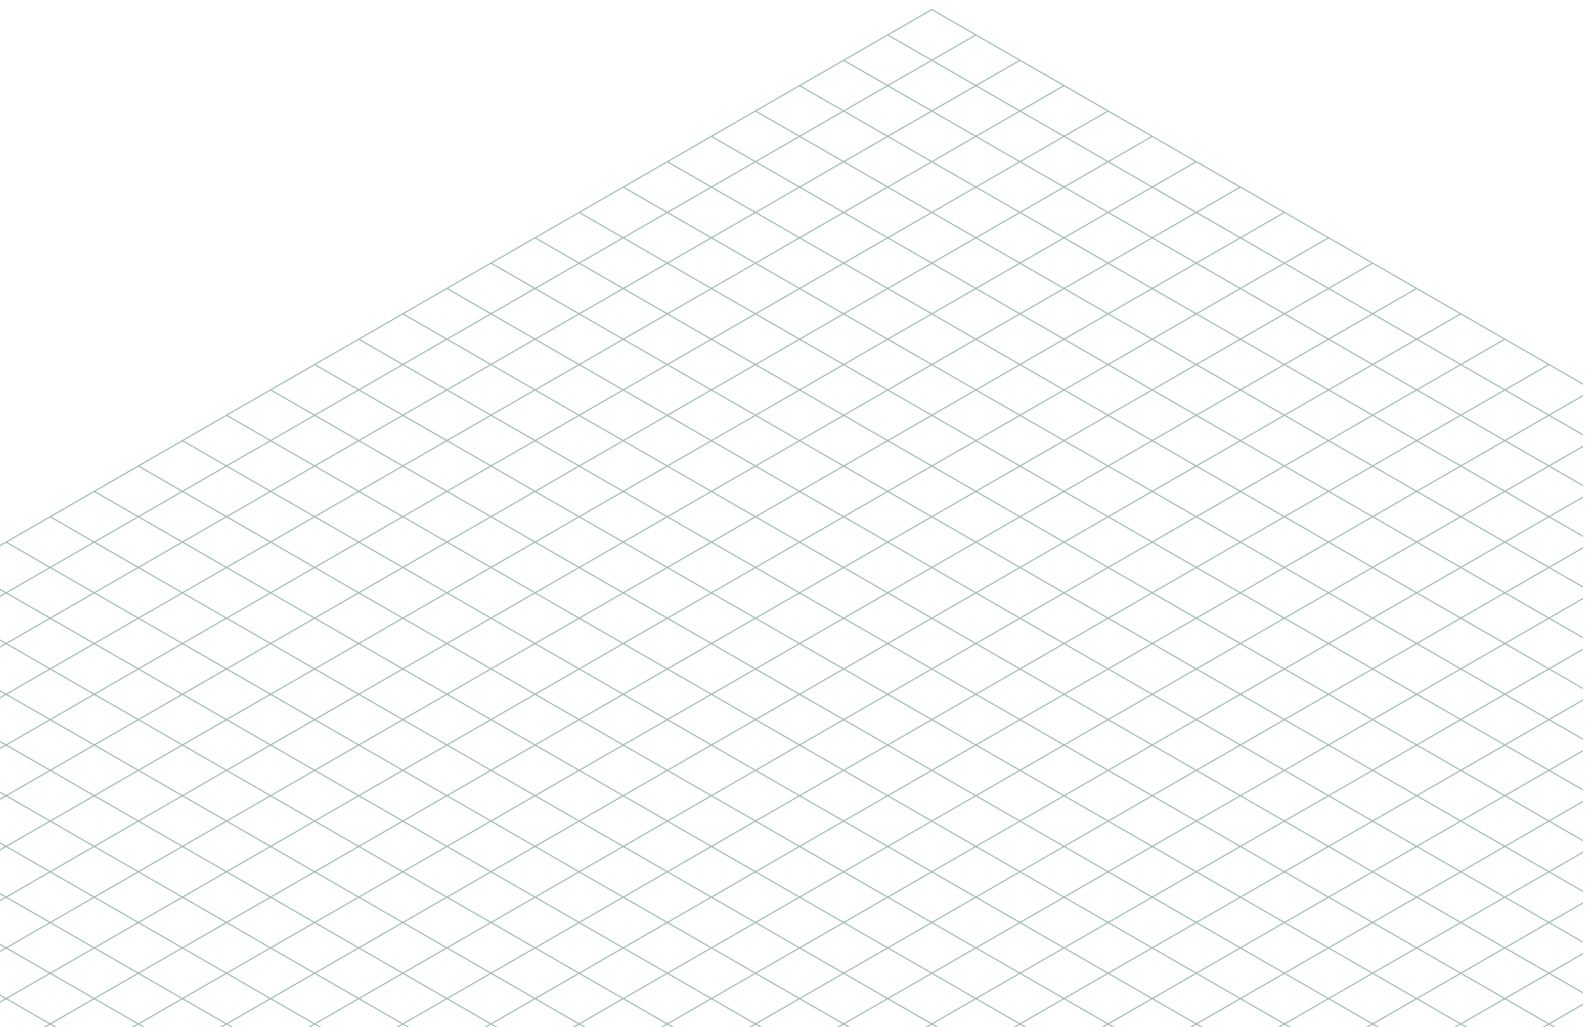 


Table of Contents

1	Introduction	2
1.1	Access.....	3
1.2	Navigation	4
1.3	List Views	5
1.4	Dashboard	7
2	Users	8
2.1	View Users.....	8
3	User Groups.....	10
3.1	View User Groups	10
3.2	Create a User Group.....	12
3.3	Edit a User Group.....	14
3.4	Delete a User Group.....	16
4	License Entitlements	18
4.1	Manage Access to Licenses	18
4.1.1	View which Groups can Access a License	18
4.1.2	Assign Users to Groups	20
4.2	Manage Licenses	27
4.2.1	View Licenses	27
4.2.2	Reserve License Seats.....	29
4.3	View License Usage	33
4.3.1	View Usage of a License	33
4.3.2	View Current License Usage for a User	34

1 Introduction

Steelwise offers the flexibility to license individual modules, enabling your business to provide different capabilities to different users and only buying what you need. If you purchase multiple license configurations, you will need to use the FRAMECAD Communities License Administrator tool to manage your software entitlements and assign them to your users.

At a glance, the four modules are:

Detail	Steelwise Detail is the base module. You gain access to all the high-productivity tools for steel detailing – importing standard 2D drawings, designing roofs, walls, and floors, automated generation of detail drawing sheets.
Import	Steelwise Import gives you access to integrations with 3D design and BIM applications such as Revit, Strucsoft, and SolidWorks using FRAMECAD's FIM format. Architectural designs or complete framing can be brought into Steelwise to complete the design and prepare for manufacturing. Detailed framing models can be sent from Steelwise to Revit for BIM coordination
Engineer	Steelwise Engineer adds FRAMECAD's world-leading steel framing engineering knowledge to your design. Select from a broad set of building codes, enter your localized engineering requirements for wind, snow, seismic and other loads, and the building code you design with, and Steelwise Detail will be engineered to meet your requirements. Steelwise Engineer also gives you full access to the detailed engineering reports for every frame and truss in your design.
CAM	Steelwise CAM has everything you need to prepare your model to be manufactured. Tooling is automatically generated for all intra-panel connections according to the capabilities of the roll-formers you have selected. Users can place explicit tooling for BIM coordination and site-specific operations. All the tooling can be viewed on your detail drawings, updated instantly with any design change. When review is complete, the manufacturing jobs are sent to production via FRAMECAD Nexa or an RFY file.

If you purchase the same quantity of each Steelwise module (e.g. two seats each of Detail, Engineer, and CAM), then all your users will simply have access to the same configuration (Detail+Engineer+CAM) when they open Steelwise. You need not do anything further with license administration.

If you instead purchase different configurations of Steelwise (e.g. configuration A with Detail + Engineer + CAM and configuration B with Detail + Engineer) then you will have multiple *entitlements* and you will establish license user *groups* to manage which users have access to each *entitlement*.

Use the FRAMECAD Communities License Administrator tool to manage your purchased software entitlements and assign them to your users.

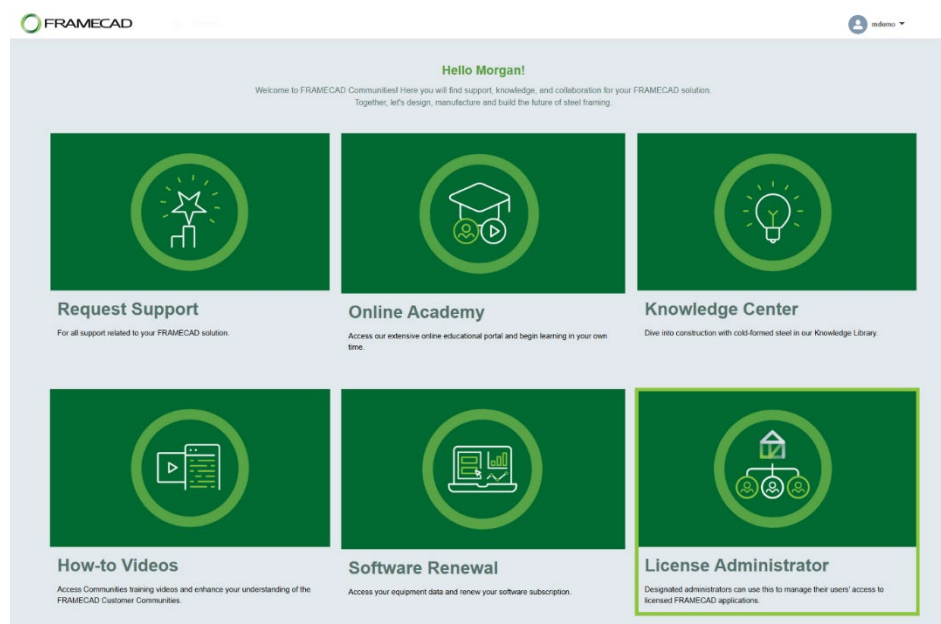 
You can, for example:

- Create and manage user groups for controlling access to licenses.
- Manage user access to licenses.
- Reserve seats from licenses for users.
- View the usage of licenses.

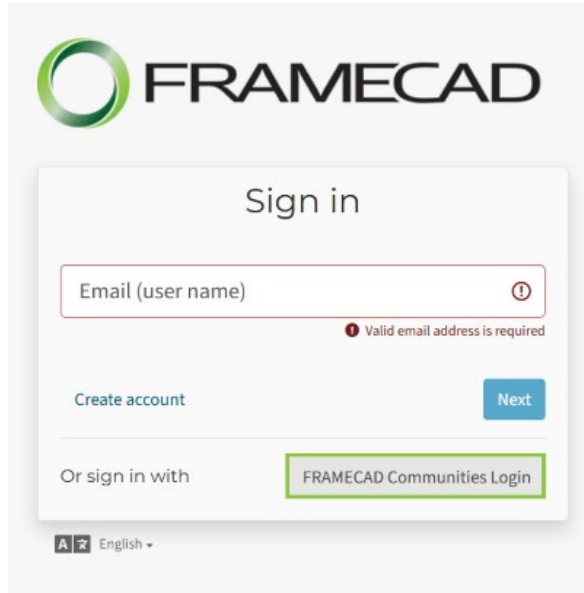 
1.1 Access

To access Communities License Administrator, you need a user account and administrator access rights to your company's data.

For access, follow the URL provided by FRAMECAD or sign in to FRAMECAD Communities (<https://communities.framecad.com>) and select the **License Administrator** tile.



From here, you will be directed to another sign-in screen. Select **FRAMECAD Communities Login**, and the license administrator will automatically sign you in using your credentials from Communities.



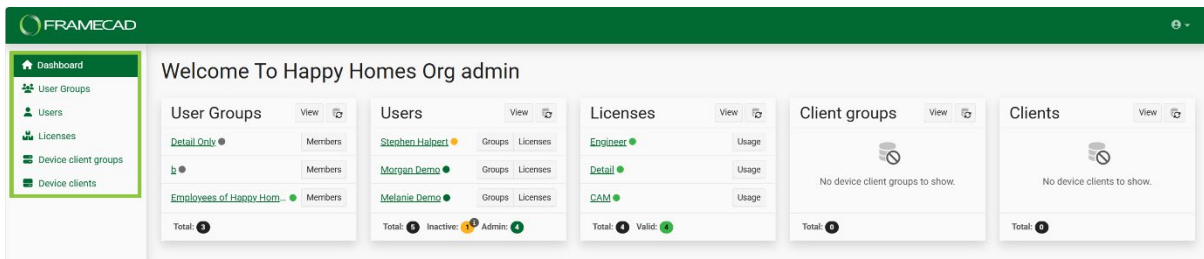 
The image shows the FRAMECAD Sign in screen. At the top is the FRAMECAD logo. Below it is a "Sign in" heading. There is a text input field for "Email (user name)" with a red border and a red information icon. Below the field is a red error message: "Valid email address is required". To the left of the "Next" button is a "Create account" link. Below the input field is a section "Or sign in with" with a button labeled "FRAMECAD Communities Login" which is highlighted with a green border. At the bottom left, there is a language selector showing "English".

If you or one of your organization's Steelwise users does not have access to License Administrator, please select "Request Support" to log a support ticket with the FRAMECAD team.

1.2 Navigation

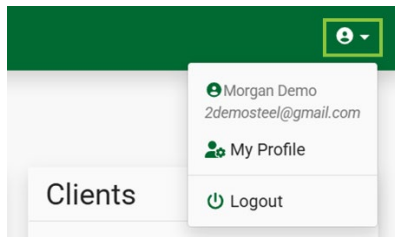 
When you log in, you first come to the Dashboard. Use the sidebar navigation on the left to navigate the different features of License Administrator. Including:

- User Groups
- Users
- Licenses

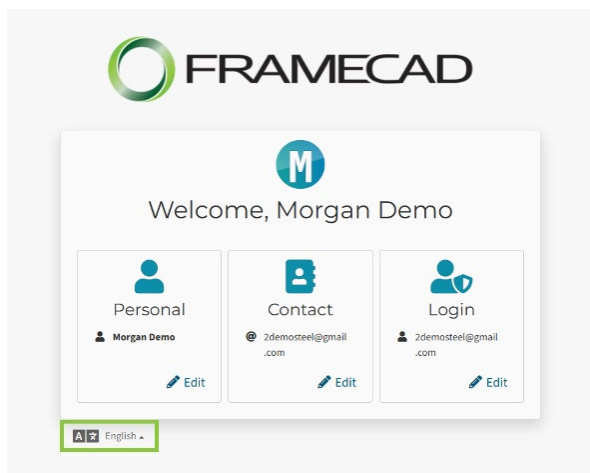 


The image shows the FRAMECAD Dashboard. The top header is green with the FRAMECAD logo and a user profile icon. The left sidebar is green with a list of navigation items: Dashboard, User Groups, Users, Licenses, Device client groups, and Device clients. The main content area is white and displays a "Welcome To Happy Homes Org admin" message. Below the message are five panels: "User Groups" (showing "Detail Only" and "Members" tabs, with a total of 1), "Users" (showing "Stephen Halbert", "Morgan Demo", and "Melanie Demo" with "Groups" and "Licenses" tabs, and a total of 3), "Licenses" (showing "Engineer", "Detail", and "CAM" with "Usage" tabs, and a total of 3), "Client groups" (showing "No device client groups to show." and a total of 0), and "Clients" (showing "No device clients to show." and a total of 0).

In the top toolbar on the right, you can access your profile settings and log out.



Select 'My Profile' to view your profile details or change the language preference of License Administrator.



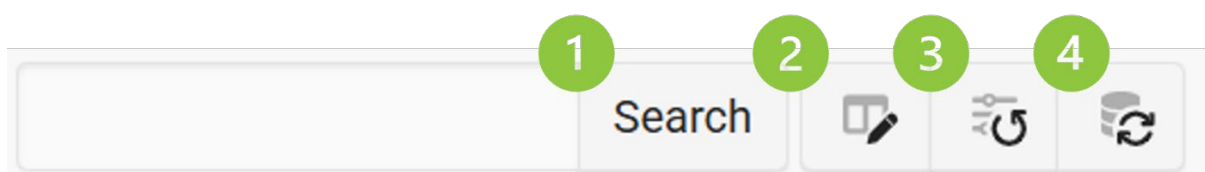 
Note: You cannot edit any personal, contact, or login details here, as these details all come from your Communities account. Return to the Communities homepage to manage your profile settings.

1.3 List Views

All the list views (such as the list of users or licenses) have some common features.

Above the list, you have the following options:

1. Search the list content. Enter text in a search field and click **Search** to update the list.
2. Select which columns to show on the list. Click the column edit icon, select the columns you want, and the list is updated.
3. Reset the list to clear the search and restore the default set of columns.
4. Reload the list to update it with the latest data. The lists are not refreshed automatically.



A reload button is also available in several other places for refreshing the data.

Some list views have an additional filter option. For example, on the user list, you can filter users based on their status.

On the list itself, you can do the following:

1. Sort the list by column. Change the sorting order by clicking the double arrow next to a column title.
2. In the rightmost **Tools** column, you have a three-dot menu for each item on the list.

Manage User Groups

Create Search 

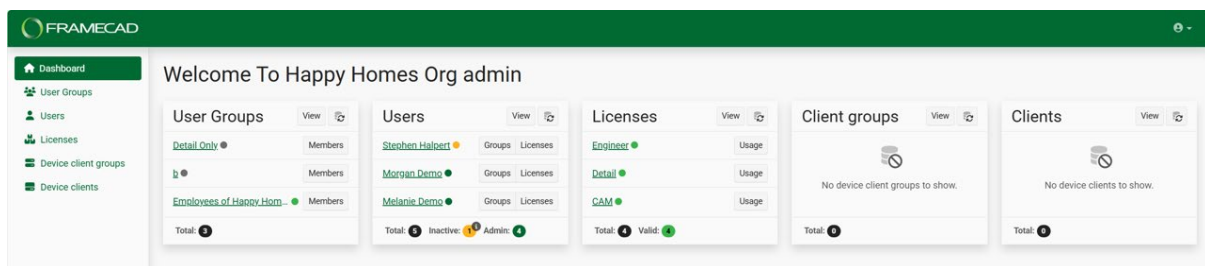 
Type	Name	Description	
Employees	Employees of Happy Homes		...
U	b		...
Detail	Detail Only		...

The menu has options for that item, such as viewing the item's details.

1.4 Dashboard

The Dashboard shows some key details on your company's data and provides quick links to commonly used functions:

- **User groups**
 - Shows information on your user groups. Use the quick links to view all user groups, or users that belong to a specific group. You can also invite users to a group.
- **Users**
 - Shows information on your users. Use the quick links to view all users, or a specific user's groups or licenses.
- **Licenses**
 - Shows information on your purchased licenses. Use the quick links to view all licenses, or the usage of a specific license.



2 Users

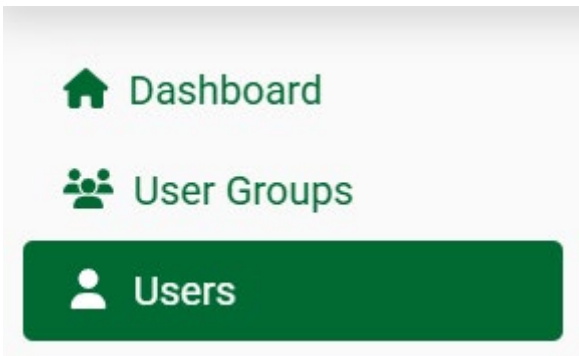 
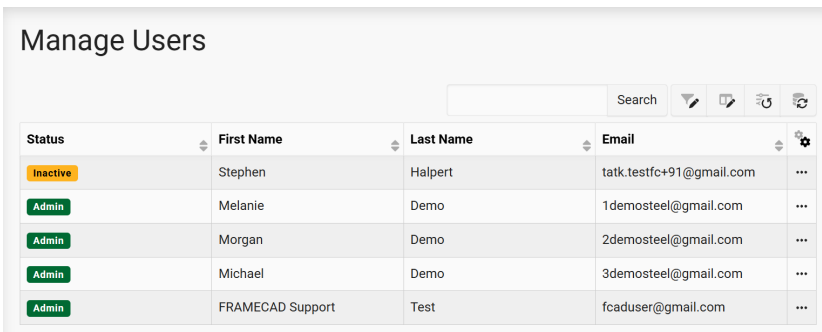 
In License Administrator, you can view user accounts for your end users, which you then assign to the correct User Group. This is done as part of applying your purchased Steelwise license entitlement to your staff.

Currently, the creation of new users, granting administrator access to users, and the deletion of users are managed by FRAMECAD. Use the **Request Support** option on the Communities homepage to request any of these actions.

Please provide the user's First name, Last name, Job Title, and email address when making support requests.

2.1 View Users

Note: For non-administrator users, the user list shows the status: **Active** or **Inactive** (depending on whether they have been active within the past 30 days) or **Suspended** (the user's account has been disabled).

Step	Illustration
Click Users on the left menu.	
The list of all your user and their statuses are now displayed.	

Click the **three dots** to open the Tools Menu.

Then click **Profile details**.

Last Name	Email	
Halpert	tatk.testfc+91@gmail.com	...
Demo	1demosteel@	
Demo	2demosteel@	
Demo	3demosteel@	
Test	fcaduser@gmail.com	...

Profile details
Groups
Licenses
Download License

View user **profile details**.

Stephen Halpert: profile details

Display Name:

Status: Inactive

Professional Title:

First Name: Stephen

Last Name: Halpert

Nickname:

Email: tatk.testfc+91@gmail.com

Phone Number:

Close

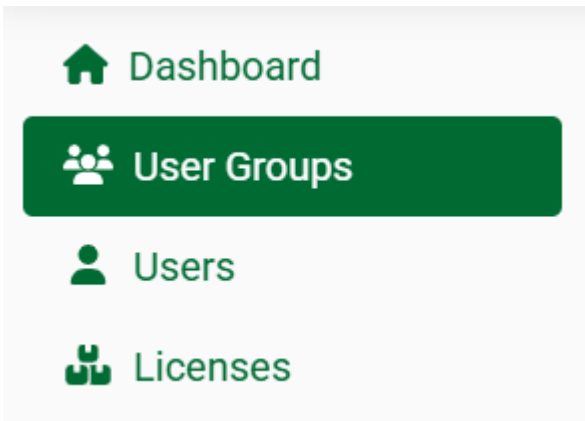 
3 User Groups

In License Administrator, you can create user groups to control your users' access to licenses.

Create groups and assign users to them based on the user persona and which software entitlement they should have access to

You cannot grant an individual user access to licenses directly—the authorization always comes through a group.

3.1 View User Groups

Step	Illustration
Click User Groups on the left menu.	 The screenshot shows a dashboard with four main menu items: 'Dashboard' (home icon), 'User Groups' (people icon, highlighted with a green button), 'Users' (person icon), and 'Licenses' (puzzle pieces icon).
The list of all your user groups is now displayed.	 The screenshot shows the 'Manage User Groups' interface. It includes a 'Create' button, a search bar, and a table with columns 'Type', 'Name', and 'Description'. The table contains two rows: 'Employees' (with a green 'Employees' tag) and 'Detail Only'.
Click the three dots to open the Tools Menu. Then click View details	 The screenshot shows a table with a 'Description' header. The table has three rows. The third row has a green box highlighting the three dots menu. The menu is open, showing three options: 'View details', 'Members', and 'Remove'.

A dialog opens, displaying the group's details.

Click on the **Entitlement Name** to check which licenses the group has access to.

User group details

Name: Detail Only

Type: **Detail**

Description:

Entitlements: [Steelwise SUB-000100](#)

Close

Edit

Clicking an entitlement opens the **Entitlement Details** dialog, which shows the licenses it holds.

Entitlement details

Name: Steelwise SUB-000100

Consuming user groups:

[b, Detail Only, Employees of Happy Homes](#)

Consuming device client groups:

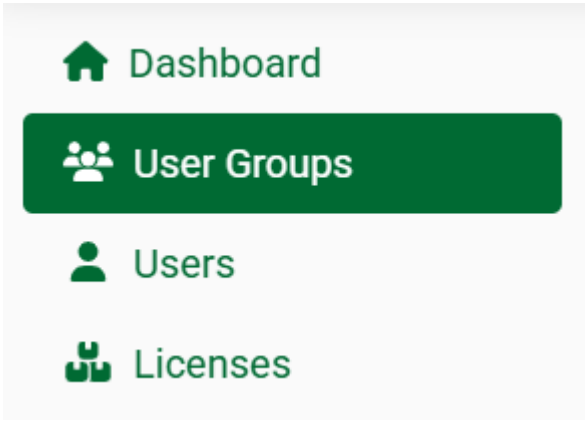 
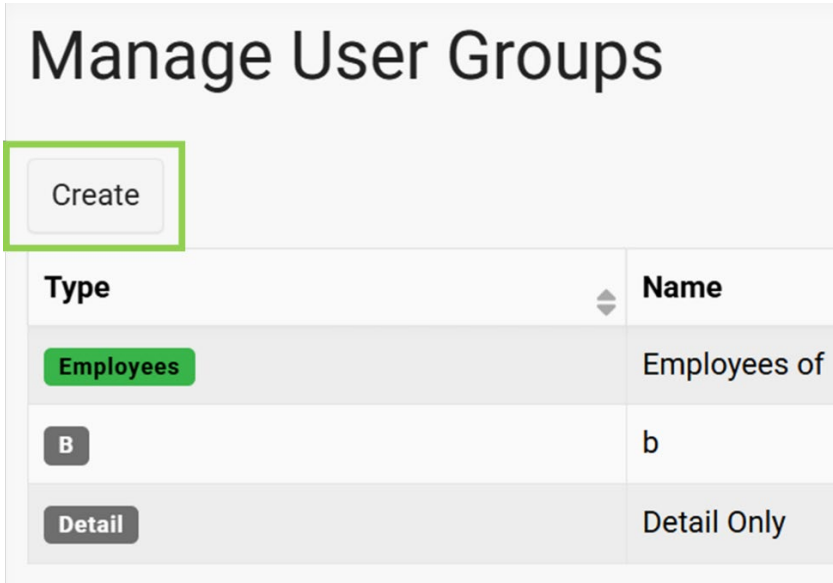 
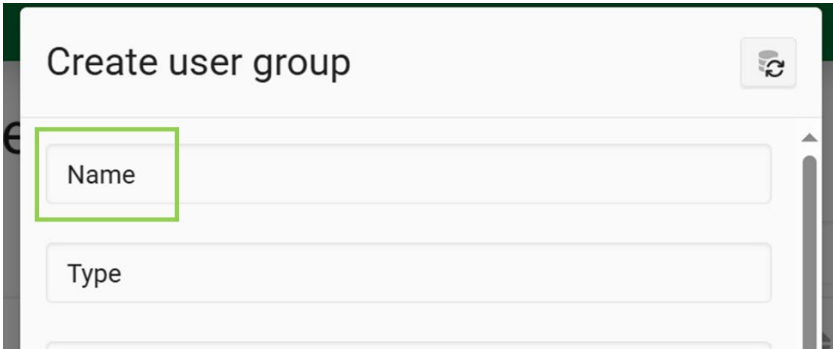 
No consuming device client groups

Assigned licenses: [Detail](#), [CAM](#)

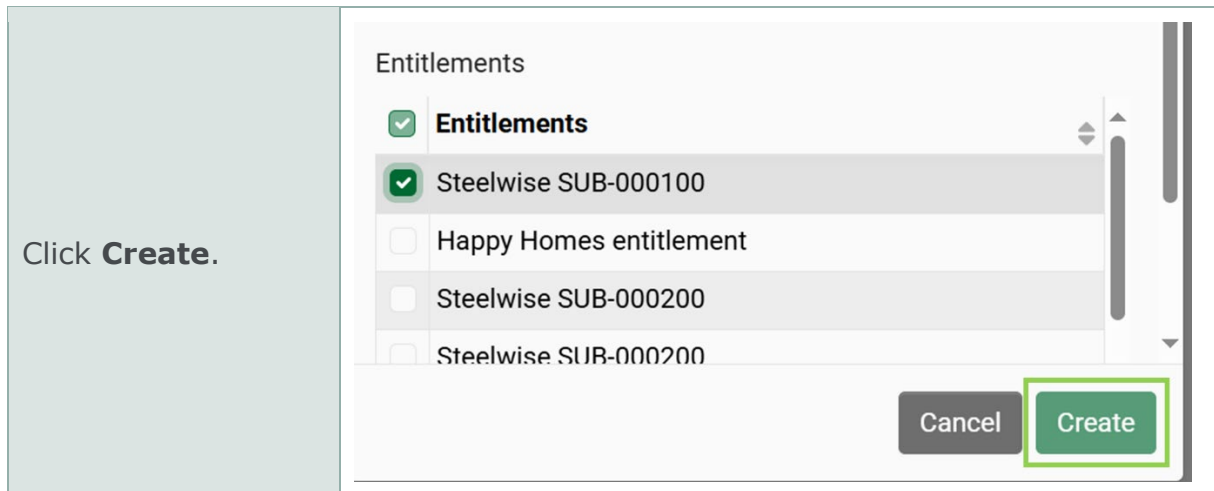 
Close

3.2 Create a User Group

You can give the new group access to licenses right away or wait until later.

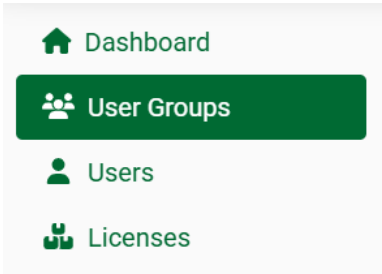 
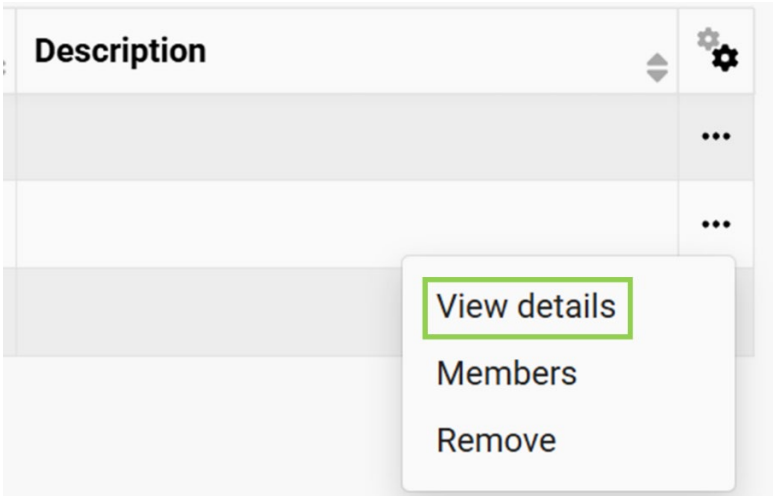 
Step	Illustration								
Click User Groups on the left menu.									
Click Create .	 <table border="1"> <thead> <tr> <th>Type</th><th>Name</th></tr> </thead> <tbody> <tr> <td>Employees</td><td>Employees of</td></tr> <tr> <td>B</td><td>b</td></tr> <tr> <td>Detail</td><td>Detail Only</td></tr> </tbody> </table>	Type	Name	Employees	Employees of	B	b	Detail	Detail Only
Type	Name								
Employees	Employees of								
B	b								
Detail	Detail Only								
Define a name for the group.									

Enter a custom type or select the predefined group "Employees."	Create user group Name Type
Optionally, enter a description.	Description Entitlements ☐ Entitlements ☐ Steelwise SUB-000100 ☐ Happy Homes entitlement ☐ Steelwise SUB-000200 ☐ Steelwise SUB-000200
Check the box to the left of an entitlement to grant access to its licenses to users of this user group.	Entitlements ☒ Entitlements ☒ Steelwise SUB-000100 ☐ Happy Homes entitlement ☐ Steelwise SUB-000200 ☐ Steelwise SUB-000200 Cancel Create



3.3 Edit a User Group

You can edit a user group's details and define which entitlements (licenses) the group can access:

Step	Illustration
Click User Groups on the left menu.	
Click the three dots to open the Tools Menu. Then click View details.	

Click **Edit** in the dialog.

User group details

Name: Employees of Happy Homes

Type: Employees

Description:

Entitlements:

[Steelwise SUB-000100](#), [Steelwise SUB-000200](#), [Steelwise SUB-000200](#), [Steelwise TEST_SUB-000200](#)

Close
Edit

Edit the desired details.

Edit user group details

Name
Employees of Happy Homes

Type
employees

ⓘ The type of "employees" group cannot be edited.

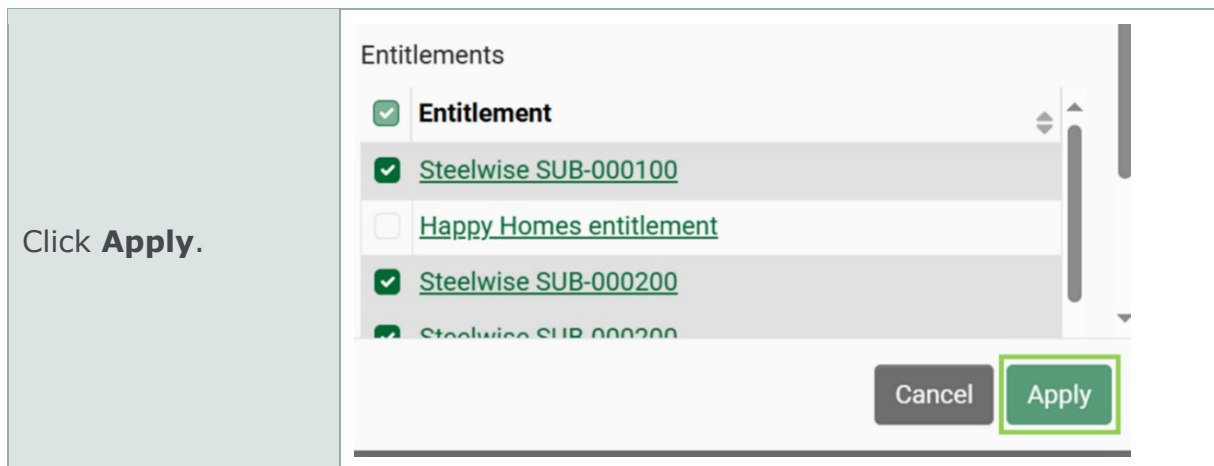 
Description

Change the **entitlements** the group has access to by checking or unchecking the boxes to the left of them.

Entitlements

☒	Entitlement
☒	Steelwise SUB-000100
☐	Happy Homes entitlement
☒	Steelwise SUB-000200
☒	Steelwise SUB-000200

Cancel
Apply



3.4 Delete a User Group

You can delete user groups, if needed, except for the predefined **employees** group. Deleting a user group does not delete the users who belonged to that group.

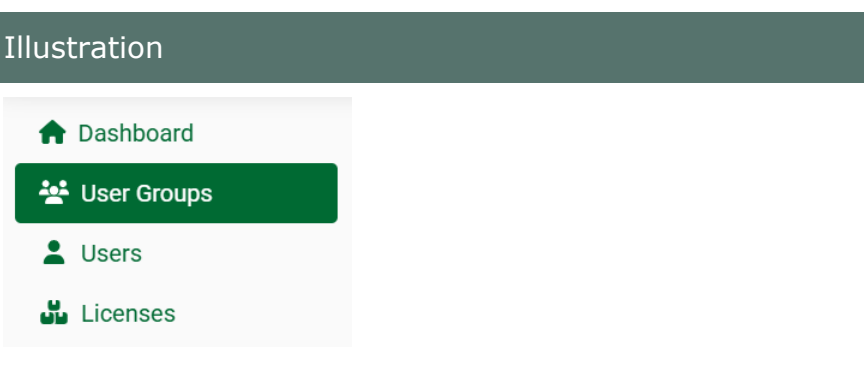 
The users in the deleted group lose access to the licenses that the group had access to, unless they still have access to the licenses through some other group. If the users have any seat reservations to the licenses, those are also released.

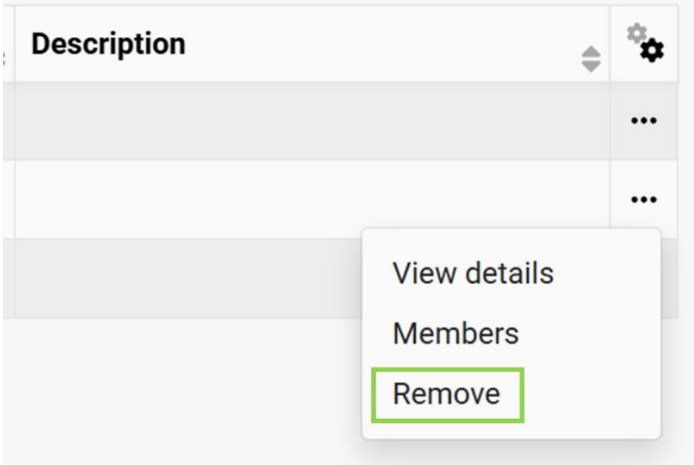 
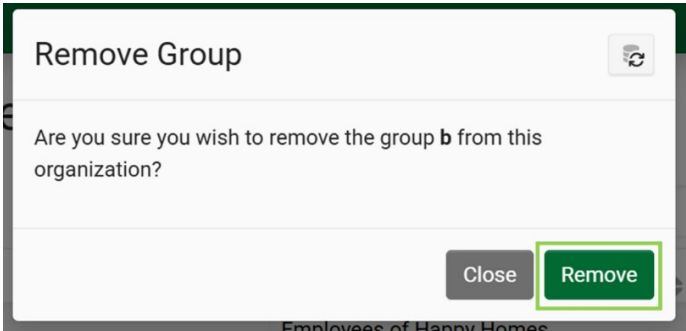 
Note: If a user no longer belongs to any group, they will not be visible anymore.

- If an administrator user no longer belongs to any of your user groups, this does not automatically remove their administrator access. If needed, make sure to first remove their administrator access, and then delete the user group.

Instead of deleting a user group, you also have the option of removing the group's access to licenses. See above how to edit a group.

To delete a user group:

Step	Illustration
Click User Groups on the left menu.	

Click the three dots to open the Tools Menu. Then click Remove.	
Click Remove in the dialog that opens to confirm.	

Note: If a user is currently using a license they no longer have access to, they are able to continue using the license until the license lease expires or the software application attempts to refresh the license lease, whichever comes first.

4 License Entitlements

4.1 Manage Access to Licenses

Access to licenses is based on group access to entitlements:

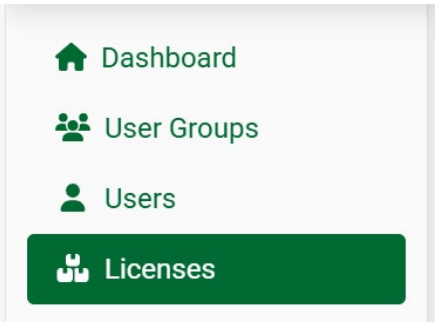 
1. You set up user groups and grant the groups access to the entitlements that hold licenses.
2. Then you associate users with applicable groups. This allows them to use the licenses that their groups have access to.

Note: if a user belongs to multiple groups, they will have access to all licenses from all the entitlements assigned to all the groups they belong to. When the user launches Steelwise, they will be assigned (check out) licenses for all available modules from the entitlements they have been given access to.

See instructions below on how to add existing users to groups. You can also remove a user from the whole company (all user groups) in one step.

If needed, you can also block users from using a license.

4.1.1 View which Groups can Access a License

Step	Illustration
Click Licenses on the left menu.	

Click the **three dots** to open the Tools Menu.

Then click **License details**.

Seats: Consumed	Seats: Available	
0	3	...
1		
0	2	...

License details
Usage
Download license

Click the **entitlement** name.

License details

Name: Detail

State: Valid

Entitlement: Steelwise SUB-000200

Valid from: 4/16/2025 Valid until: 4/15/2026

Allowed versions: -

Model: Floating

View the user groups with access to the license.

Entitlement details

Name: Steelwise SUB-000200

Consuming user groups: Employees of Happy Homes

Consuming device client groups:
No consuming device client groups

Assigned licenses: Detail, Engineer

Close

4.1.2 Assign Users to Groups

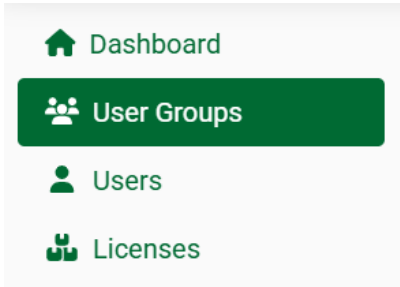 
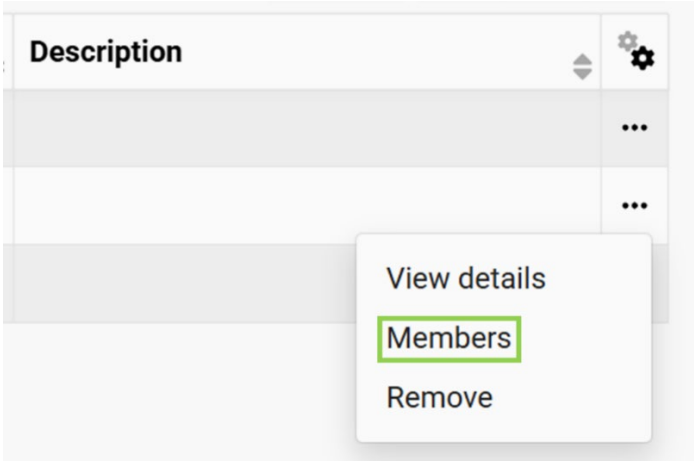 
Add users to a group to give them access to the licenses that a user group has access to.

If you remove a user from a group, they lose access to the group's licenses and their seat reservations for the licenses are released, unless they belong to another group that still allows them access to those licenses.

If the removed user is currently using a license they no longer have access to, they are able to continue using the license until the license lease expires or the software application tries to refresh the lease, whichever comes first.

Note: If you remove a user from all your user groups, they will not be visible anymore.

To define which users belong to a group:

Step	Illustration
Click User Groups on the left menu.	
Click the three dots to open the Tools Menu. Then click Members	

View the **users** that are already in the user group by noting which are selected.

b: members

Select group members

☒	Member	
☒	Stephen Halpert <tatk.testfc+91@gmail.com>	Inactive
☒	Melanie Demo <1demosteel@gmail.com>	Admin
☐	Morgan Demo <2demosteel@gmail.com>	Admin
☐	Michael Demo <3demosteel@gmail.com>	Admin
☐	FRAMECAD Support Test <fcaduser@gmail.com>	Admin

Selected: 2

Cancel Apply

Select **users** to be in the group by checking the box to the left of their name or remove users by unchecking the box.

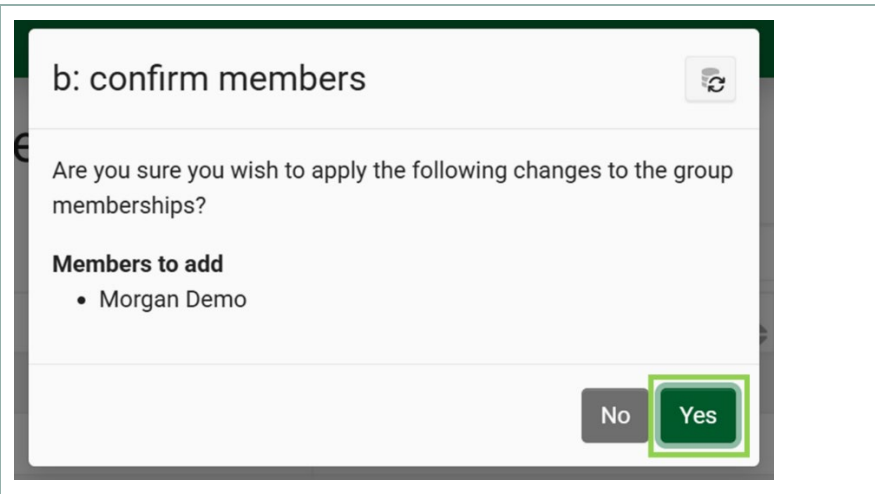 
☒	Member
☒	Stephen Halpert <tatk.testfc+91@gmail.com>
☒	Melanie Demo <1demosteel@gmail.com>
☒	Morgan Demo <2demosteel@gmail.com>

Click **Apply**.

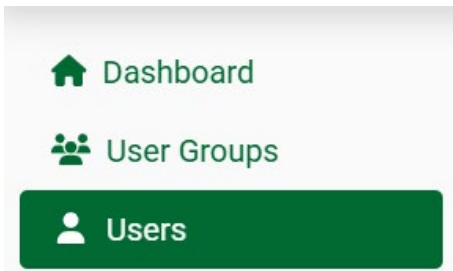 
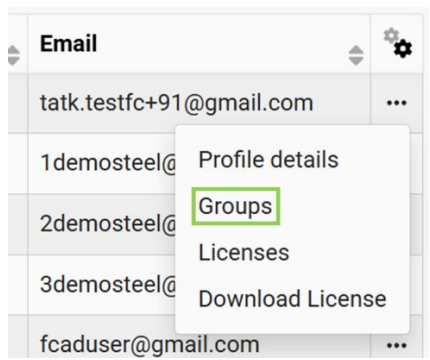 
☒	Morgan Demo <2demosteel@gmail.com>	Admin
☐	Michael Demo <3demosteel@gmail.com>	Admin
☐	FRAMECAD Support Test <fcaduser@gmail.com>	Admin

Selected: 3

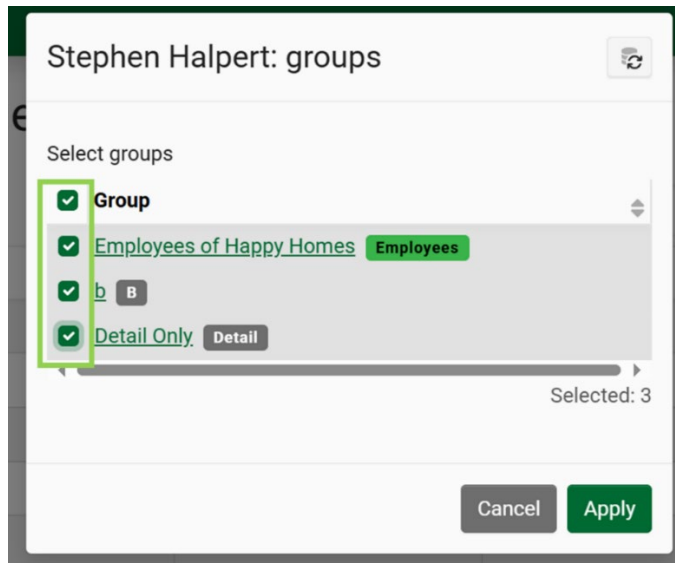 
Cancel Apply

Click Yes to confirm.	
-------------------------------------	--

Or, change which groups a specific user belongs to:

Step	Illustration
Click Users on the left menu.	
Click the three dots to open the Tools Menu. Then click Groups .	

Check the box to the left of the User Group(s) you wish the user to be a part of or uncheck the User Groups you wish for them not to be.



Stephen Halpert: groups

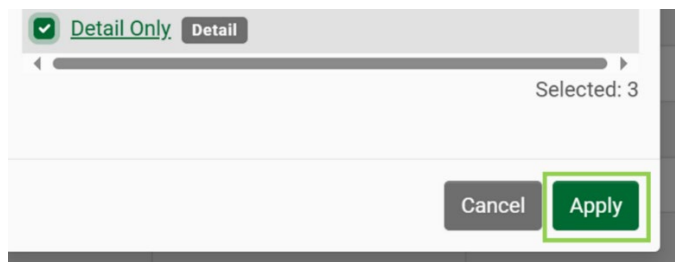 
Select groups

- ☒ Group
- ☒ Employees of Happy Homes Employees
- ☒ b B
- ☒ Detail Only Detail

Selected: 3

Cancel Apply

Click **Apply**.

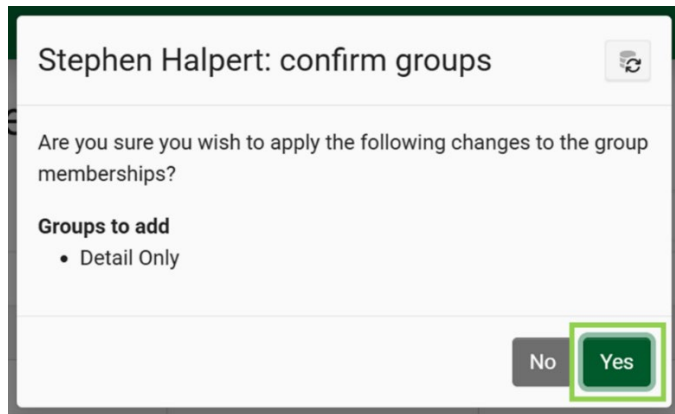 


☒ Detail Only Detail

Selected: 3

Cancel Apply

Click **Yes** to confirm.



Stephen Halpert: confirm groups

Are you sure you wish to apply the following changes to the group memberships?

Groups to add

- Detail Only

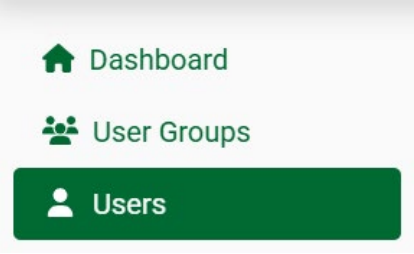 
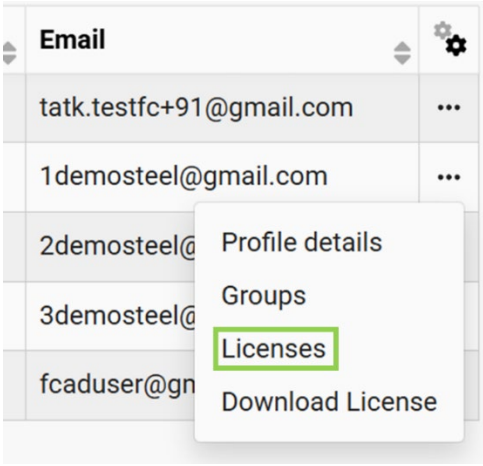 
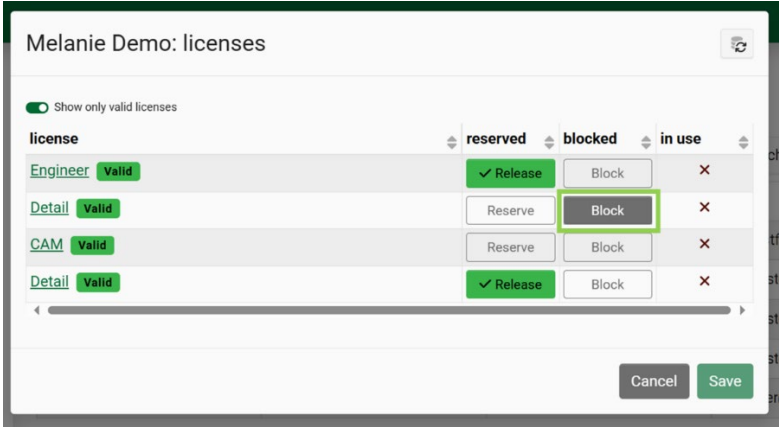 
No Yes

4.1.2.1 Block a User from Using a License

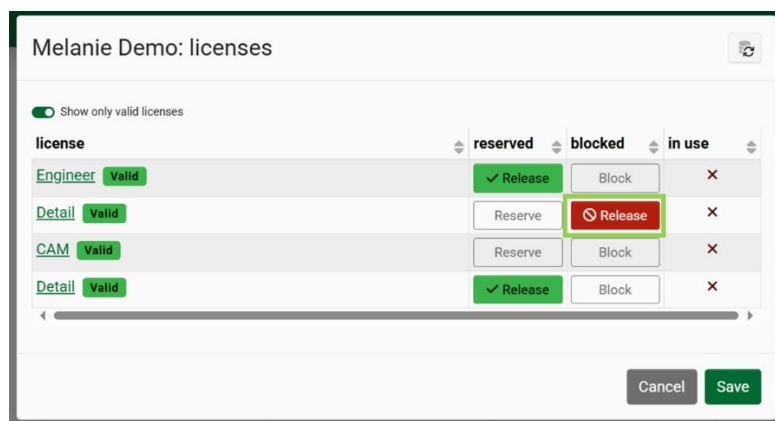 
If needed, you can block a user from using a seat-based license. The user cannot use the blocked license even if they have access to it through a group. The user is also blocked from downloading an offline license.

If the user is currently using a license that you block for them, they can continue using the license until the license lease expires or the software application tries to refresh the lease, whichever comes first.

To block licenses for a user:

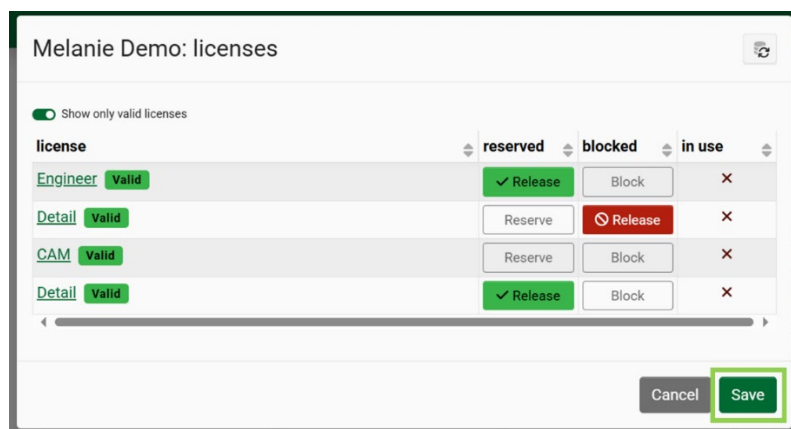 
Step	Illustration
Click Users on the left menu.	
Click the three dots to open the Tools Menu. Then click Licenses .	
Click Block in the Blocked column to block a license. Note: If the user has a seat reservation for the license, blocking releases it.	

Click **Release** to unblock a license.

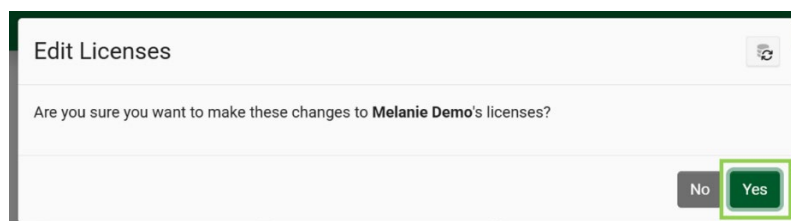 


license	reserved	blocked	in use
Engineer Valid	✓ Release	Block	×
Detail Valid	Reserve	Release	×
CAM Valid	Reserve	Block	×
Detail Valid	✓ Release	Block	×

Click **Save**.



Click **Yes** to confirm.

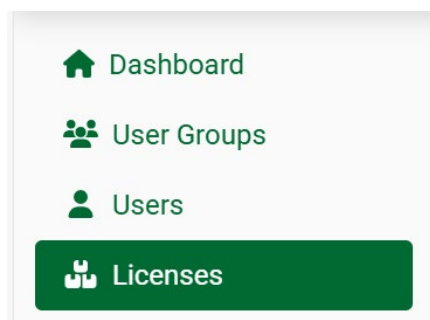 


Or, to block a license for multiple users at a time:

Step

Illustration

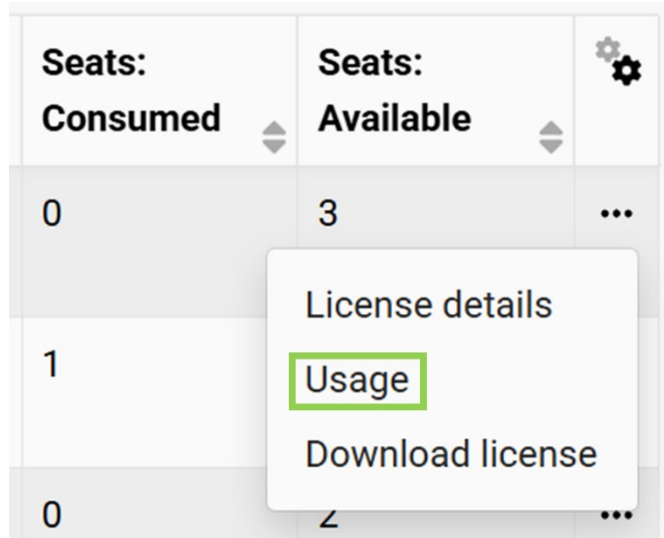 
Click **Licenses** on the left menu.



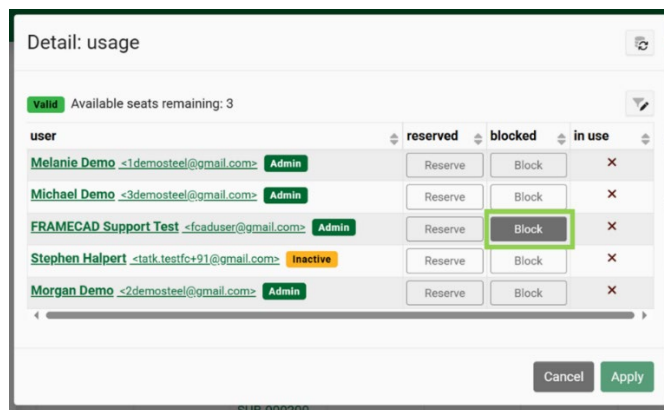 
- Dashboard
- User Groups
- Users
- Licenses**

Click the **three dots** to open the Tools Menu.

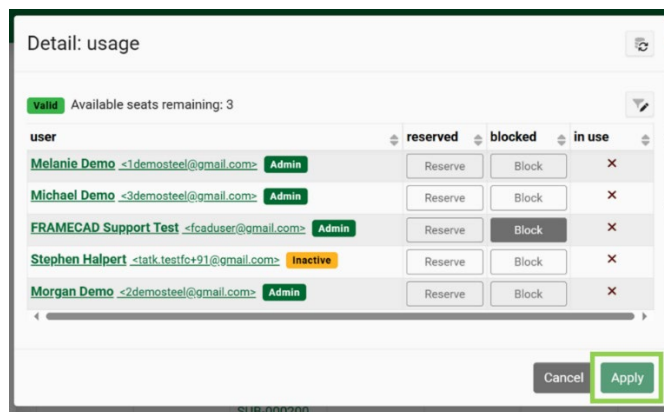 
Then click **Usage**.



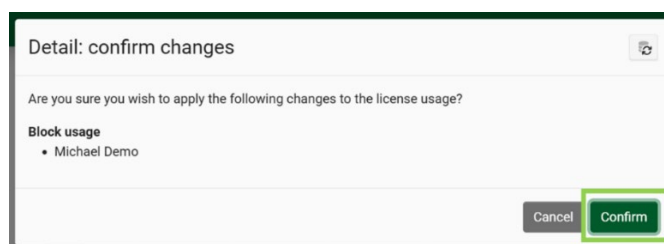 
Block users by selecting the box in the Blocked column or unblock users by selecting **Release**.



Click **Apply**.



Click **Confirm**.



4.2 Manage Licenses

You can view information on the licenses you have purchased, for example, how many seats you have.

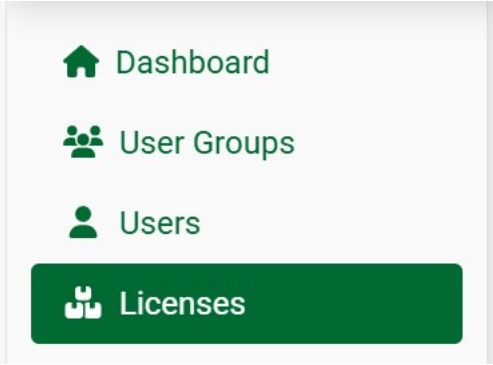 
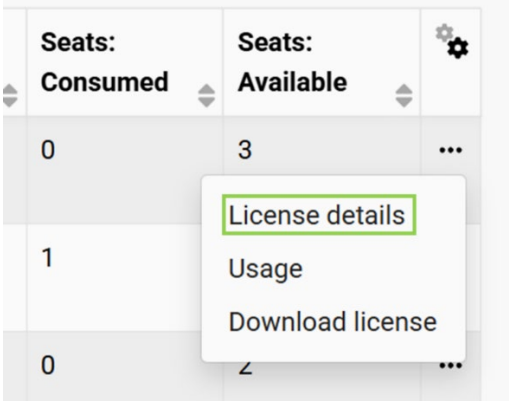 
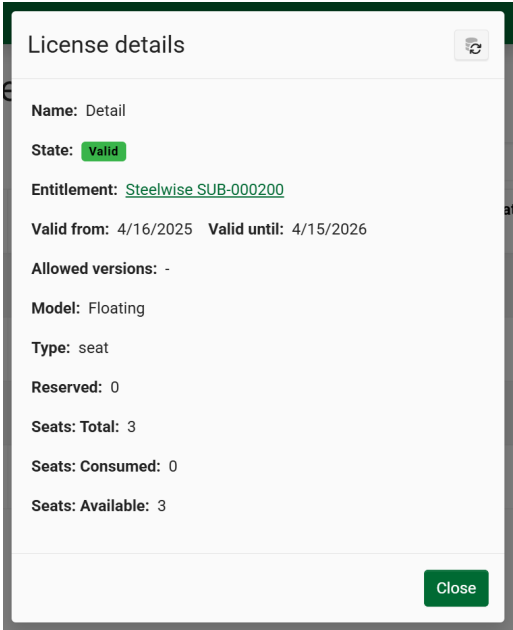 
Your licenses are organized into one or more entitlements: containers that hold the licenses and that you also use for managing user access to the licenses.

When a user starts using a license, this starts a license lease in the system—a time-limited authorization for that user to use the license. The lease defines how the license allows using the software application, for example, which features are allowed, and when the authorization expires.

4.2.1 View Licenses

1. In the left sidebar, go to **Licenses**.
 - a. The list of your company's licenses opens, displaying information on each license:
 - i. **State**: The license status: **Valid**, **Scheduled** (the validity period has not started yet), **Expiring** (the validity ends within 7 days), **Expired**, or **Deactivated**.
 - ii. **Valid from** and **Valid until**: The validity start and end date.
 - iii. **Name**: The name of the license.
 - iv. **Entitlement**: The entitlement that holds the license.
 - v. **Model**: How seats in a seat-based license are handled: We use **Floating Licenses**: Either the license seats are used from a floating pool, or the license uses named seats but no advance reservations are needed.
 - vi. **Type**: The type of credit the license has: seats, use count, or use time (currently only "seats" type is use).
 - vii. **Reserved**: The number of seats that have been reserved from a seat-based license.
 - viii. **Seats: total**: The total number of seats in a seat-based license.
 - ix. **Seats: consumed**: The number of seats in a seat-based license that are currently in use.
 - x. **Seats: available**: The number of seats in a seat-based license that are currently not being used. Reserved seats are excluded from the available seats.
 - xi. **Allowed versions**: The software versions that the license allows to use (not currently used by FRAMECAD).

To view a license's details:

Step	Illustration
Click Licenses on the left menu.	
Click the three dots to open the Tools Menu. Then click License details	
View the license details.	

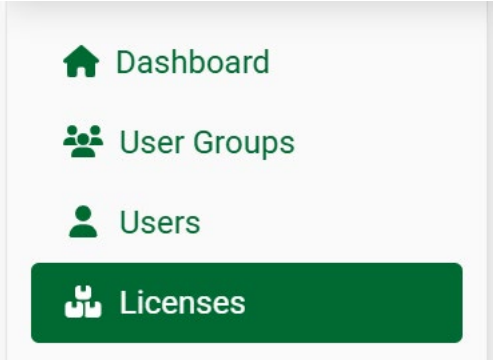 
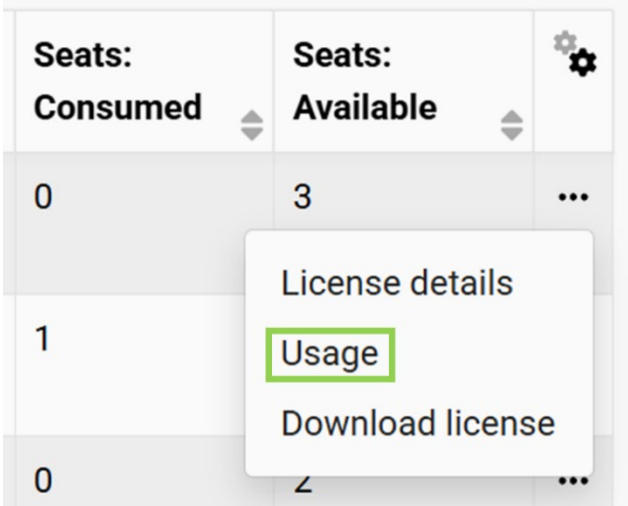 
4.2.2 Reserve License Seats

With seat-based licenses, you can reserve a seat for a user.

Steelwise uses floating seats, so reservations are not mandatory. You may choose to use seat reservations, for example, to make sure certain users always have access to the software application.

To change seat reservations for a license:

Note: When reserving a license seat, if the Reserve button is disabled, there are no available seats left in the license.

Step	Illustration
Click Licenses on the left menu.	
Click the three dots to open the Tools Menu. Then click Usage .	

Reserve a license seat for a user by selecting the box in the Reserved column or release a seat license by selecting **Release**.

Detail: usage

Valid Available seats remaining: 2

user	reserved	blocked	in use
Melanie Demo <1demosteel@gmail.com> Admin	Reserve	Block	×
Michael Demo <3demosteel@gmail.com> Admin	Reserve	Block	×
FRAMECAD Support Test <fcaduser@gmail.com> Admin	Reserve	Block	×
Stephen Halpert <tatk.testfc+91@gmail.com> Inactive	✓ Release	Block	×
Morgan Demo <2demosteel@gmail.com> Admin	Reserve	Block	×

Cancel Apply

Click **Apply**.

Detail: usage

Valid Available seats remaining: 2

user	reserved	blocked	in use
Melanie Demo <1demosteel@gmail.com> Admin	Reserve	Block	×
Michael Demo <3demosteel@gmail.com> Admin	Reserve	Block	×
FRAMECAD Support Test <fcaduser@gmail.com> Admin	Reserve	Block	×
Stephen Halpert <tatk.testfc+91@gmail.com> Inactive	✓ Release	Block	×
Morgan Demo <2demosteel@gmail.com> Admin	Reserve	Block	×

Cancel Apply

Click **Confirm**.

Detail: confirm changes

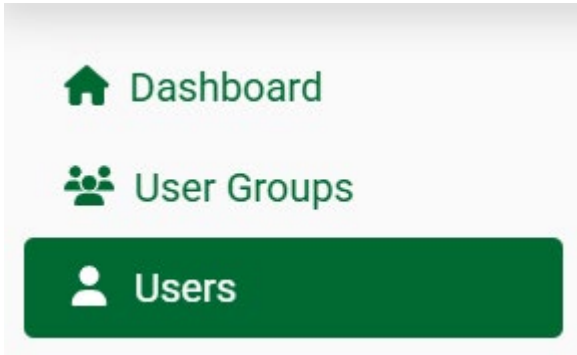 
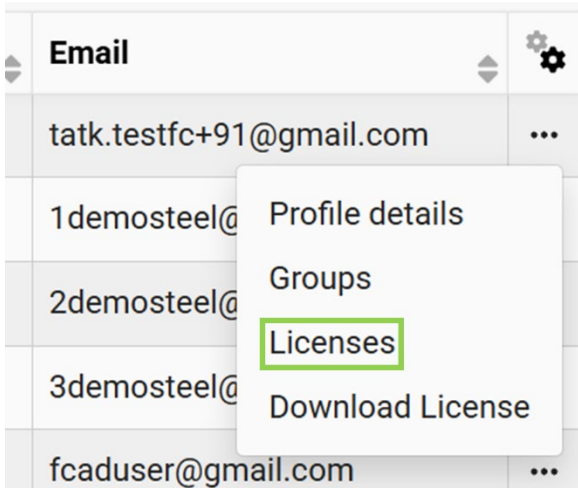 
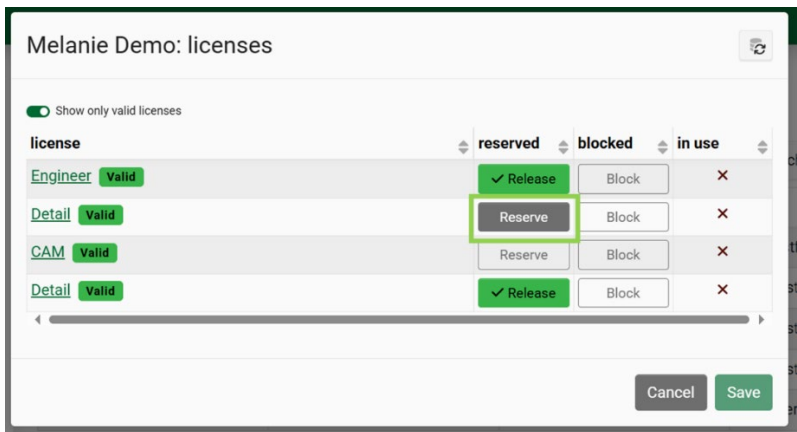 
Are you sure you wish to apply the following changes to the license usage?

Add reservation

- Stephen Halpert

Cancel Confirm

You can also change an individual user's seat reservations on the user list:

Step	Illustration
Click Users on the left menu.	
Click the three dots to open the Tools Menu. Then click Licenses .	
Reserve a license seat for a user by selecting the box in the Reserved column.	

Click **Release** to unblock a license.

Melanie Demo: licenses

☒ Show only valid licenses

license	reserved	blocked	in use
Engineer Valid	<input checked="" type="button" value="Release"/>	Block	☒
Detail Valid	Reserve	Block	☒
CAM Valid	Reserve	Block	☒
Detail Valid	<input checked="" type="button" value="Release"/>	Block	☒

Cancel Save

Click **Save**.

Melanie Demo: licenses

☒ Show only valid licenses

license	reserved	blocked	in use
Engineer Valid	<input checked="" type="button" value="Release"/>	Block	☒
Detail Valid	<input checked="" type="button" value="Release"/>	Block	☒
CAM Valid	Reserve	Block	☒
Detail Valid	<input checked="" type="button" value="Release"/>	Block	☒

Cancel

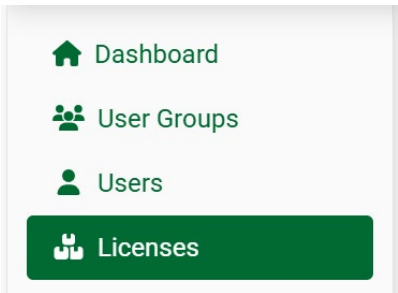 
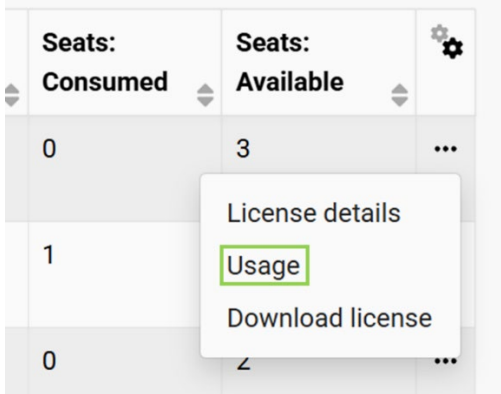 
4.3 View License Usage

You can view usage information on your licenses.

4.3.1 View Usage of a License

Note: The **IN USE** column shows usage information for the users currently using the license:

1. The hardware ID of the device on which the software application is being used.
2. The validity start and end of the user's current authorization to use the software (their license lease).

Step	Illustration																																													
Click Licenses on the left menu.																																														
View the license list which shows the total, used, and currently available credit for licenses.	Manage Licenses <table><thead><tr><th>State</th><th>Name</th><th>Entitlement</th><th>Type</th><th>Reserved</th><th>Seats: Total</th><th>Seats: Consumed</th><th>Seats: Available</th><th></th></tr></thead><tbody><tr><td>Valid</td><td>Detail</td><td>Steelwise SUB-000200</td><td>seat</td><td>0</td><td>3</td><td>0</td><td>3</td><td>...</td></tr><tr><td>Valid</td><td>Detail</td><td>Steelwise SUB-000100</td><td>seat</td><td>1</td><td>2</td><td>1</td><td>1</td><td>...</td></tr><tr><td>Valid</td><td>CAM</td><td>Steelwise SUB-000100</td><td>seat</td><td>0</td><td>2</td><td>0</td><td>2</td><td>...</td></tr><tr><td>Valid</td><td>Engineer</td><td>Steelwise SUB-000200</td><td>seat</td><td>1</td><td>3</td><td>1</td><td>2</td><td>...</td></tr></tbody></table>	State	Name	Entitlement	Type	Reserved	Seats: Total	Seats: Consumed	Seats: Available		Valid	Detail	Steelwise SUB-000200	seat	0	3	0	3	...	Valid	Detail	Steelwise SUB-000100	seat	1	2	1	1	...	Valid	CAM	Steelwise SUB-000100	seat	0	2	0	2	...	Valid	Engineer	Steelwise SUB-000200	seat	1	3	1	2	...
State	Name	Entitlement	Type	Reserved	Seats: Total	Seats: Consumed	Seats: Available																																							
Valid	Detail	Steelwise SUB-000200	seat	0	3	0	3	...																																						
Valid	Detail	Steelwise SUB-000100	seat	1	2	1	1	...																																						
Valid	CAM	Steelwise SUB-000100	seat	0	2	0	2	...																																						
Valid	Engineer	Steelwise SUB-000200	seat	1	3	1	2	...																																						
Click the three dots to open the Tools Menu. Then click Usage .																																														

View the user's usage information under the **IN USE** column.

Detail: usage

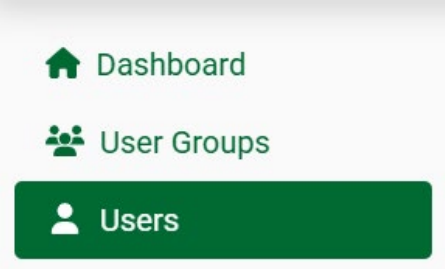 
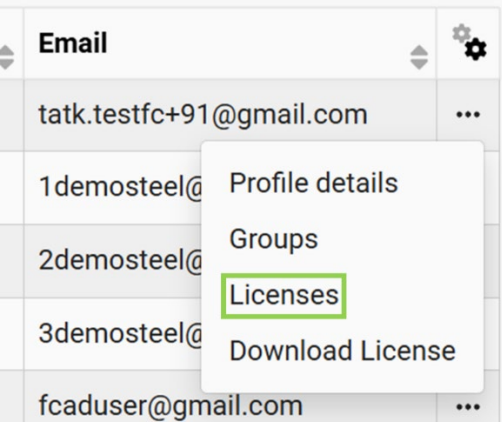 
Valid Available seats remaining: 2

user	reserved	blocked	in use
Melanie Demo <1demosteel@gmail.com> Admin	Reserve	Block	X
Michael Demo <3demosteel@gmail.com> Admin	Reserve	Block	X
FRAMECAD Support Test <fcaduser@gmail.com> Admin	Reserve	Block	HW ID: QMSQ3Q7C From: 6/11/25 11:17:44 AM Until: 6/11/25 11:27:44 AM
Stephen Halpert <tatk.testfc+91@gmail.com> Inactive	Reserve	Block	X
Morgan Demo <2demosteel@gmail.com> Admin	Reserve	Block	X

Cancel Apply

4.3.2 View Current License Usage for a User

1. In the left sidebar, go to **Users**.
2. Click the **Tools** menu > **Licenses** for the user.
 - a. A dialog opens, showing the same usage information as above for the licenses that the user has access to.

Step	Illustration
Click Users on the left menu.	
Click the three dots to open the Tools Menu. Then click Licenses .	

View the user's usage information under the **IN USE** column.

FRAMECAD Support Test: licenses

Show only valid licenses

license	reserved	blocked	in use
Engineer Valid	Reserve	Block	×
Detail Valid	✓ Release	Block	HW ID: QMGQ3QTC From: 6/12/25, 9:11:09 AM Until: 6/12/25, 9:21:09 AM
CAM Valid	Reserve	Block	×
Detail Valid	Reserve	Block	×

Cancel

Save